


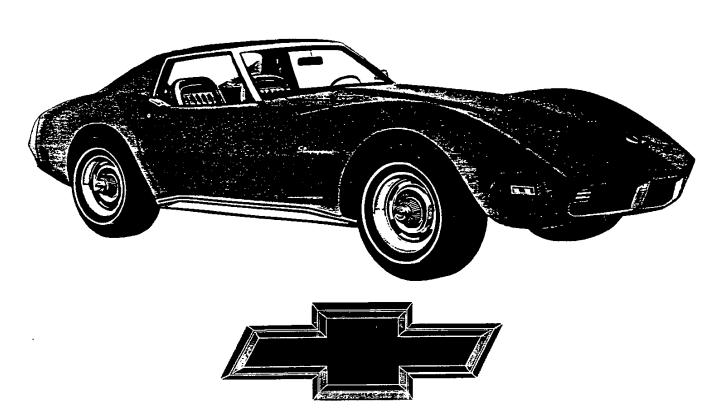

# 1974

# CORVETTE

# **SPECIFICATIONS**




GENUINE CHEVROLET


 			·		
					-
					•
				•	
				•	
	٠				

# **General Motors 1974 VIN System**

### **Passenger Car**

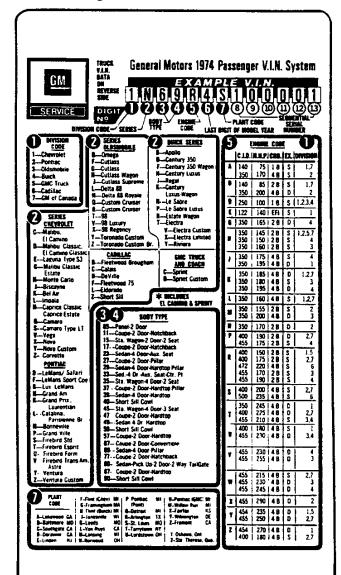

### **Light Truck**

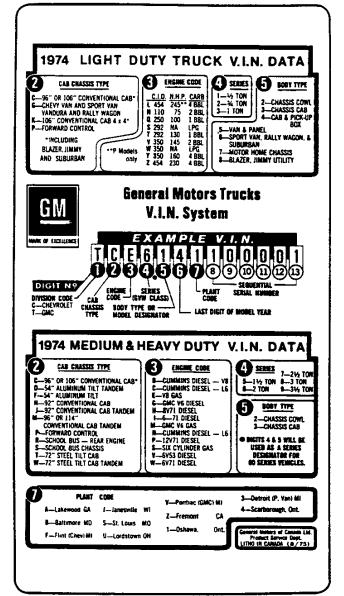

•
•

Production: 32,028 coupe, 5,474 convertible, 37,502 total.

### 1974 NUMBERS

Vehicle: 1Z37J4S400001 through 1Z37J4S437502

· For convertibles, third digit is a 6.

Fifth digit varies as follows: J=350ci, 195hp;

T=350ci, 250hp; Z=454ci, 270hp.

**Suffix:** CKZ: 350ci, 195hp, mt CLR: 350ci, 250hp, mt

CLA: 350ci. 195hp, at CLS: 350ci. 250hp, mt. ce CLB: 350ci. 195hp, mt. ce CUC: 350ci. 195hp, at. ce CLD: 350ci. 250hp, at CUS: 454ci. 270hp, at. ce CUH: 350ci, 250hp, at, ce CWT: 454ci, 270hp, mt. ce

Block: 3970010: 350ci, 195hp, 250hp

3999289: 454ci, 270hp

Head: 333882: 350ci, 195hp, 250hp

336781: 454ci, 270hp

Carburetor: Rochester Q-jet #7044201 & 7044221: 454ci, 270hp, mt

Rochester Q-jet #7044202 & 7044206: 350ci, 195hp, at Rochester Q-jet #7044203 & 7044207: 350ci, 195hp, mt Rochester Q-jet #7044208 & 7044210: 350ci, 250hp, at Rochester Q-jet #7044209 & 7044211: 350ci, 250hp, mt Rochester Q-jet #7044223 & 7044225: 454ci, 270hp, at Rochester Q-jet #7044503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of the process Q-jet #704503: 350ci, 195hp, at Control of

Rochester Q-jet #7044502: 350ci. 195hp, at. ce Rochester Q-jet #7044503: 350ci. 195hp, mt. ce Rochester Q-jet #7044505: 454ci. 270hp, at. ce Rochester Q-jet #7044506: 350ci. 250hp, at. ce Rochester Q-jet #7044507: 350ci. 250hp, mt. ce

**Distributor:** 1112114: 454ci, 270hp 1112850: 350ci, 195hp, mt, ce

1112150: 350ci, 250hp 1112851: 350ci, 195hp, at. ce 1112247: 350ci, 195hp 1112853: 350ci, 250hp, at

1112544: 350ci, 195hp, mt, ce

Alternator: 1100544: All with ac 1100950: All without ac

Ending Vehicle: Aug 73: 01250 Jan 74: 16184 Jun 74: 33257

Sep 73: 04111 Feb 74: 19258 Jul 74: 33257 Oct 73: 07605 Mar 74: 22367 Aug 74: 37502

Nov 73: 10813 Apr 74: 25751 Dec 73: 12830 May 74: 29602

**Abbreviations:** ac=air conditioning, at=automatic transmission. ce=california emissions, ci=cubic inch, hp=horsepower, mt=manual transmission.

### **1974 FACTS**

- The transition to "soft" bumpers was completed in 1974 with the new body-color rear bumpers. The urethane plastic skin had built-in recesses for the license plate and taillights, and a vertical center seam. The skin covered an aluminum impact bar mounted on two telescopic brackets.
- These were the last Corvettes without catalytic converters. Fuel requirement was 91-octane leaded or low-lead regular.
- Radiators were redesigned for more efficient cooling at low speeds.
- Shoulder belts on 1974 models were integrated with the lap belts. Also, the locking mechanism was changed from a pull-rate type to a swingingweight type activated by the car's deceleration.
- The alarm activator moved from the rear panel to the driver-side fender.
- Magnets were added to power steering units to attract debris in the fluid.
- The inside rearview mirror increased in width to ten inches.

### **1974 OPTIONS**

RPO#	DESCRIPTION QTY	RETAIL \$
1YZ37	Base Corvette Sport Coupe32,028	\$6.001.50
1YZ67	Base Corvette Convertible5.474	5.765.50
_	Custom Interior Trim	154.00
A31	Power Windows 23,940	86.00
A85	Custom Shoulder Belts (std with coupe) 618	41.00
C07	Auxiliary Hardtop (for convertible)2.612	267.00
C08	Vinyl-Covered Auxiliary Hardtop	329.00
C <b>50</b>	Rear Window Defroster	43.00
C60	Air Conditioning29.397	467.00
FE7	Gymkhana Suspension 1,905	7.00
_	Optional Rear Axle Ratios	12.00
J50	Power Brakes 33 306	49.00
LS4	454ci, 270hp Engine	250.00
L82	350ci. 250hp Engine	299.00
M21	4-Speed Manual Trans. close ratio	0.00
M40	Turbo Hydra-Matic Automatic Transmission 25,146	0.00
N37	Tilt-Telescopic Steering Column27,700	82.00
N41	Power Steering	117.00
QRM	White Stripe Steel Belted Tires, GR70x159,140	32.00
QRZ	White Letter Steel Belted Tires, GR70x15 24,102	45.00
U05	Dual Horns	4.00
U58	AM-FM Radio. stereo	276.00
U69	AM-FM Radio	173.00
UA1	Heavy Duty Battery (std with LS4)9.169	15.00
UF1	Map Light (on rearview mirror) 16.101	5.00
YF5	California Emission Test	20.00
Z07	Off Road Suspension and Brake Package47	400.00

- A 350ci, 195hp engine, 4-speed wide-ratio manual transmission, soft top (conv) or T-tops (cpe), and vinyl interior were included in the base price.
  YJ8 cast aluminum wheels appeared on early 1974 option lists, but Chevrolet records indicate none were sold.
- Custom interior included leather seat trim, wood-grain accents and lower carpet trim on interior door panels, wood-grain accents on console, and special cut-pile carpeting.
- M40 was no cost with the base 350ci. 195hp engine, but cost \$103 (\$97 early in production) with LS4 or L82. It was not available with Z07.
- The Z07 package was available only with L82 and LS4 engines, and required M21. It included special front and rear suspension and heavyduty front and rear power brakes.
- The FE7 gymkhana suspension included stiffer front sway bar and stiffer springs. It was included with Z07. There were no order restrictions.
- This was the last year for 454ci "big block" engines in Corvettes.

### **1974 COLORS**

CODE	EXTERIOR	SOFT TOP	WHEELS	INTERIORS
910	Classic White	Bk-W	Silver	Bk-Db-Dr-N-S-Si
914	Silver Mist	Bk-W	Silver	Bk-Db-Dr-S-Si
917	Corvette Gray	Bk-W	Silver	Bk-Db-Dr-N-S-Si
922	Corvette Med Blue	e Bk-W	Silver	Bk-Db-Si
948	Dark Green	Bk-W	Silver	Bk-N-S-Si
956	Bright Yellow	Bk-W	Silver	Bk-N-S-Si
968	Dark Brown	Bk-W	Silver	Bk-N-S-Si
974	Medium Red	Bk-W	Silver	Bk-Dr-N-S-Si
976	Mille Miglia Red	Bk-W	Silver	Bk-Dr-N-S-Si
980	Corvette Orange	Bk-W	Silver	Bk-N-S-Si
_		_	•.	

Suggested interiors shown. Other combinations were possible.

Interior Codes: 400=Bk/V, 404=Bk/L, 406=Si/V, 407=Si/L, 408=N/V, 413=Db/V, 415=S/V, 416=S/L, 425=Dr/V.

**Abbreviations:** Bk=Black, Db=Dark Blue, Dr=Dark Red, L=Leather, N=Neutral, S=Saddle, Si=Silver, V=Vinyl W=White.

# The Corvette Black Book

1953-1993

October 1992

Published by

Michael Bruce Associates, Inc. Michael Antonick, President Post Office Box 396 Powell, Ohio 43065



Corvette 40 1 Corvette 42 1	Corvette22 Corvette24 Corvette26 Corvette26 Corvette30 Corvette30 Corvette32 Corvette34	4004
979 Corvette 74		CONTENTS 1965 Corvette 44 1966 Corvette 48 1968 Corvette 48 1968 Corvette 52
Literature 124 Coupons 127		1981 Corvelle 76 1982 Corvelle 78 1984 Corvelle 80 1985 Corvelle 82

presented in this publication. publisher and author disclaim responsibility for the accuracy of any or all information Because of the possibility of errors, exceptions, or other reasons for Inaccuracy, the © Michael Bruce Associates, Inc., 1978, 1980, 1983, 1985, 1988, 1991, 1992. All Michael Bruce Associates, Inc. Reproduction without permission is prohibited rights reserved under Pan American and Universal Copyright Conventions by

General Motors Corporation. Brian Pearce, John Poloney, Bill Rhodes, Jeffrey Smith, Mark & Dixie Smith, Lou Krughoff, Gary Lisk, Bill Locke, Bob Lojewskl, Bob McDorman, Chip Miller, Bill Mock, Dangremond, Dr. M. F. Dobbins, Bob Ecklos, the late Sam Folz, John Hibbert, Mike Barthelme, Michele Boling, Kent Brooks, Barry Brown, David Burroughs, Steve enthusiasts who contributed their expertise to this and previous editions of the Callaway Engineering, to Mercury Marine, and to the Chevrolet Motor Division of Vitalle, Jerry Wadsworth, Jerry Weichers and Don Williams. Thanks also to Hunt, Alan Kaplan, Paul Kitchen, Gary Konner, Ralph Kramer and statt. Jim Corvette Black Book Noland Adams. Dan Aldridge, John Amgwert, Pat Baker, Jane Michael Bruce Associates, Inc. acknowledges with appreciation the following

Notice: The Corvette Black Book and its publisher, Michael Bruce Associates, Inc. have no relationship or connection whatever with Hearst Business Media National Auto Research Division of Hearst Business Media Corporation. Corporation, its parent or aftiliated corporations, or the Black Book published by

ated with or sponsored by General Motors or its Chevrolet Motor Division Michael Bruce Associates, Inc. and the Corvette Black Book are not associ-

Munzer: restored by Bill Munzer and Don Williams Cover: Photo and design by Mike Antonick. 1963 Corvette owned by Bill Printed and bound in the United States of America

ISBN: 0-933534-35-3

Mail Order To: Michael Bruce Associates, Inc.

Powell, Ohio 43065

Post Office Box 396

Chatroonis chilernational BOOK TRADE DISTRIBUTION BY

# BLACK BOOK ORDER FORM

Street Send Corvette Black Book 1953-1993 Send Mail Order To: Michael Bruce Associates, Inc. Name Corvette Black Book 1953-1993 Street Name BLACK BOOK ORDER FORM Check or money order enclosed \$ Check or money order enclosed \$ Postage/hard shipping container Ohio residents add .72 sales tax Ohio residents add .72 sales tax Postage/hard shipping container \_ capies of the \_ copies of the Powell, Ohio 43065 Post Office Box 396 State @ \$11.95 each \$ @ \$11.95 each \$ State 돭 강 3.00 3.00

		•
		•
		•
	•	
· ,		
·		
-		

# VEHICLE DIMENSIONS BEL AIR, IMPALA, CAPRICE CLASSIC, CAPRICE ESTATE

Model	Sedan	2-Door Sport Coupe	Convertible Coupe	Station Wagon
Length Overall Width Overall (Body) Height Overall Wheelbase Tread-Front Tread-Rear	222.6"	222.6"	222.6"	228.1"
	79.5"	79.5"	79.5"	79.5"
	54.5"	53.7"	53.5"	57.5"
	121.5"	121.5"	121.5"	125.0"
	64.1"	64.1"	64.1"	64.1"
	64.0"	64.0"	64.0"	64.0"

### MALIBU, MALIBU CLASSIC, LAGUNA MALIBU CLASSIC ESTATE, EL CAMINO

Model	Sedan	2-Door Sport Coupe	Station Wagon	Sedan Pickup
Length Overall Width Overall (Body) Height Overall Wheelbase Tread-Front Tread-Rear	210.3" 76.6" 53.6" 116.0" 61.5" 60.7"	206.3" 76.6" 53.1" 112.0" 61.5" 60.7"	216.2" 76.6" 55.7" 116.0" 61.5" 60.7"	213.4" 76.6" 55.2" 116.0" 59.3"*

### MONTE CARLO

### **CAMARO**

### NOVA

Model	2-Door Sport Coupe	Model	2-Door Sport Coupe	Model	4-Door Sedan	2-Door Sport Coupe
Length Overall Width Overall (Body) Height Overall	213.1" 77.6" 52.7" 116.0" 61.9" 61.1"	Length Overall Width Overall (Body) Height Overall Wheelbase Tread-Front Tread-Rear	195.4" 74.4" 49.1" 108.0" 61.3" 60.0"	Length Overall Width Overall (Body) Height Overall Wheelbase Tread-Front Tread-Rear	111.0"	196.6" 72.4" 52.5" 111.0" 59.8" 59.6"
Weight: Coup 3814 lbs.	e 	Weight: With L6 Eng. 3399 lbs. With V-8 Eng. 3627 lbs.		Curb Weight: Approxir with L-6 Engine; 344 Engine.	mately 33 43 lbs. wi	00 lbs. th V-8

### SECTION 0

## **GENERAL INFORMATION AND LUBRICATION**

### **CONTENTS OF THIS SECTION**

General Information	0-1
Lubrication	0-11

### GENERAL INFORMATION

Model Identification	0-1	Vehicle Identification Number	0-4
Vehicle Dimensions (Except Corvette)	0-2	Keys and Locks	0.4
Corvette Vehicle Dimensions	0-2	Pushing to Start Engine	
Unit and Serial Numbers	0-3	•	-
Engine and Transmission Number (V.I.N.)	0-3	Towing Vehicles	0-0
Number Locations	0-4	Lifting Vehicles	0-6

### MODEL IDENTIFICATION

CAR			MODEL	PASS. OR
LINE	SERIES NAME	BODY STYLE	DESIGNATION	SEATS
		4-Dr. Sedan	1BK69	6
	Bel Air	4-Dr. Station Wagon	1BK35	2-Seat
		4-Dr. Station Wagon	1BK45	3-Seat
		4-Dr. Sedan	1BL69	6
		4-Dr. Sport Sedan	1BL39	6
CHEVROLET	impala	2-Dr. Sport Coupe	18L57	6
	'	2-Dr. Custom Coupe	1BL47	6
		4-Dr. Station Wagon	1BL35	2-Seat
	1	4-Dr. Station Wagon	1BL45	3-Seat
		4-Dr. Sedan	1BN69	6
	Caprice Classic	2-Dr. Sport Coupe	1BN47	6
	- 7	4-Dr. Sport Sedan	18N39	6
		2-Dr. Convertible	1BN67	6
	Caprice Estate	4-Dr. Station Wagon	1BN35	2-Seat
		4-Dr. Station Wagon	1BN45	3-Seat
		4-Dr. Sport Sedan	1AC29	6
	Malibu	2-Dr. Sport Caupe	1AC37	6
	}	4-Dr. Station Wagon	1AC35	2-Seat
		4-Dr. Sport Sedan	1AD29	6
	Matibu Classic	2-Dr. Sport Coupe	1AD37	6
		4-Dr. Station Wagon	1AD35	2-Seat*
CHEVELLE	Malibu Classic			
CHEVELLE	Estate	4-Dr. Station Wagon	1AG35	2-Seat
		2-Dr. Sport Coupe	1AE37	5**
	El Camino	2-Dr. Pickup Delivery	1AC80	3
	El Camino Classic	2-Dr. Pickup Delivery	1AD80	3
MONTE				
CARLO	Monte Carlo S	2-Dr. Sport Coupe	1AH57	6
		4-Dr. Sedan	1XX69	6
	Nova	2-Dr. Coupe	1XX27	6
NOVA		2-Dr. Hatchback Coupe	1XX17	6
		4-Dr. Sedan	1XY69	6
	Nova Custom	2-Dr. Coupe	1XY27	6
		2-Dr. Hatchback Coupe	1XY17	6
CAMARO	Camaro	2-Dr. Sport Coupe	1FQ87	4
Cumuno	Camaro "Type LT"		1FS87	4
CORVETTE	Corvette	2-Dr. Sport Coupe	1YZ37	2
CONVETTE	1	2-Dr. Convertible	1YZ67	2

<sup>\*</sup>Third seat available as RPO on V-8 equipped station wagon

ENGINE CODE LETTER	DISPLACEMENT CU. IN.	TYPE	CARBURETOR
0	250	L-6	1-BBL
H	358	V-8	2-BBL
J	350	V-8	4-B8L
			(DUAL EXH.)
K	350	V-8	4-BBL
			(DUAL EXH.)
Ŕ	400	V-8	2-BBL
į T	350	V-8	4-88L
			(DUAL EXH.)
X	454	V-8	4-88L
Y	454	V-8	4-BBL
		{	(DUAL EXH.)
Z	454	V-8	4-BBL
		1	(DUAL EXH.)
1	1	4	}

### VEHICLE COMPONENT SERIAL AND UNIT NUMBER LOCATION

Component	Model	Location
Vehicle Identification Number Plate	All except Corvette Corvette	Top of instrument panel left, front Inside left windshield pillar
Body Number, Trim and Paint Plate	1B000 1A000 1X000 1F000 1Y000	Upper right-hand side of dash panel Upper left-hand door hinge pillar
Engine Transmission Identification Code	6 Cylinder  8 Cylinder 3-Speed (Muncie) 4-Speed (Muncie) 3-4 Speed (Saginaw) Turbo Hydra-Matic 250, 350 Turbo Hydra-Matic 400	On pad at right-hand side of cylinder block at rear of distributor On pad at front, right-hand side of cylinder block On boss above filler plug On right side of case at lower rear of cover flange On lower right side of case adjacent to rear of cover Right vertical surface of oil pan On blue tag right side of transmission
Vehicle (dentification Number	Turbo Hydra-Matic 250 Turbo Hydra-Matic 350 Turbo Hydra-Matic 375 6 and 8 Cylinder Engines	On boss lower right side of converter housing On boss left side to rear of manual control lever Same as engine identification code
Rear Axle Number	All except Corvette Corvette	On right or left axle tube adjacent to carrier On bottom surface of carrier at cover mounting flange
Delcotron	All	On top drive end frame
Starter	All	Stamped on outer case, toward rear
Battery	All	On cell cover segment, top of battery

### **VEHICLE DIMENSIONS**

### VEHICLE DIMENSIONS—CORVETTE

Model	Convertible	Sport Coupe
Length Overall	185.5 69.0 47.8" 98.0 58.7 59.5	" ,, 47.7" "
Curb Weight: 3429 lbs. Co 3422 lbs. Sp with Base V	ort Coupe	

### SERIAL NUMBERS

For the convenience of servicemen when writing up certain business papers, such as Warranty Claims Product Information Reports, or reporting product failures in any way, we are showing on a chart, the location of various unit numbers. These unit numbers and their prefixes and suffixes are necessary on these papers for various reasons-such as accounting, follow-up on production, etc.

The prefixes on certain units identify the plant in which the unit was manufactured, and thereby permits proper follow-up of the plant involved to get corrections made when necessary.

### **ENGINE AND TRANSMISSION NUMBER**

The Vehicle Identification Number is stamped on the engine and transmission of each vehicle (see chart for location).

### Example:

Los Angeles	VIN Sequence
1B000 Models	
(First Vehicle)	. <u>00</u> 0001
1A000 Models	400004
(First Vehicle)	. <u>10</u> 0001

At multi-car plants where more than one Chevrolet series is produced, the VIN sequence numbers will be staggered to eliminate duplication of component identification numbers.

Manufacturer Identity	Series Code Letter	Body Style	Engine Model	Modei Year	Assembly Plant	Unit Number
1	2	3	4	(5)	6	7
1	N	47	R	4	F	100025

- 1. Manufacturer's identity number assigned to all Chevrolet built vehicles.
- 2. Series (See Model Identification in this section.)
- 3. Body Style (See Model Identification in this section.)
- 4. Engine Code (See Table 1).
- 5. Last number of model year (1974).
- 6. F-Flint.
- 7. Unit numbering will start at 000001 or 100001 depending on the Vehicle.

### **KEYS AND LOCKS**

Four keys (two rectangular head and two oval head) are provided with each vehicle. The rectangular head key operates the ignition switch only. The oval-head key operates all other locks and arms the anti-theft alarm on Corvette).

### PUSHING, TO START ENGINE

CAUTION: Towing car to start is not recommended due to the possibility of the disabled car accelerating into tow car.

### **AUTOMATIC TRANSMISSION**

Do not attempt to start the engine by pushing the car. Should the battery become discharged, it will be necessary to use an auxiliary battery with jumper cables to start the engine.

### Jump Starting with Auxiliary (Booster) Battery

The following procedure is for use only under the following conditions. Departures from these conditions and procedures, could result in: (1) serious personal injury (particularly to eyes) or property damage from such things as battery explosion, battery acid or electrical burns, or (2) damage to electronic components in either vehicle. If all the conditions cannot be met, or if you are uncertain about them, we strongly recommend for your safety and that of your car that you leave the starting to a competent mechanic.

The battery in the other vehicle must be of the same nominal voltage, 12 volts, and must be negatively grounded. (All General Motors cars, light trucks (10,000 GVWR and under), and motor homes use 12-volt, negatively grounded electrical systems and can be used to jump start one another.) The nominal voltage and grounding of the other vehicle's battery may be determined by checking the specifications in its owner's manual. Use of a booster battery of a higher nominal voltage, or which is positively grounded may result in serious personal injury or property damage.

CAUTION: Never expose battery to open flame or electric spark-battery action generates hydrogen gas which is flammable and explosive. Don't allow battery fluid to contact eyes. skin, fabrics, or painted surfaces-fluid is a sulfuric acid solution which could cause serious personal injury or property damage. Flush any contacted protection such as industrial safety speciacles or goggles when working on or near battery. Remove rings, metal watch bands and other metal jewelry before jump starting or working around a battery. Be careful in using metal tools and equipment. If such metal should contact the positive battery terminal (or

metal in contact with it) and any other metal on the car, short circuit may occur which could cause personal injury. Batteries and battery acid should always be kept out of reach of

### To Jump Start:

- 1. Position the two vehicles so they are NOT touching. Set parking brake and place automatic transmission in "PARK" (neutral for manual transmission) in each vehicle. Also turn off lights, heater and all other unnecessary electrical loads.
- 2. Remove vent caps from both the booster and the discharged batteries. Lay a cloth over the open vent wells of each battery. These two actions help reduce the explosion hazard always present in either battery when connecting "live" booster batteries to "dead" batteries.
- 3. Attach one end of one jumper cable to the positive terminal of the booster battery (identified by a red color, "+" or "P" on the battery case, post or clamp) and the other end of same cable to positive terminal of discharged battery.
- 4. Attach one end of the remaining negative cable to the negative terminal (black color, "-" or "N") of the booster battery, and the other end to the engine lift bracket on 6 cylinder models and delcotron mounting bracket for V-8 models on 1974 Chevrolet products (do not connect directly to negative post of dead battery)-taking care that clamps from one cable do not inadvertently touch the clamps on the other cable. Do not lean over the battery when making this connection.
- 5. Start the engine in the vehicle that is providing the jump start (if it was not running). Let run a few minutes, then start the engine in the car with the discharged battery.
- 6. Reverse the above sequence exactly when removing the jumper cables. Reinstall vent caps and dispose in a safe manner any cloths used to cover vent wells, as the cloths may have corrosive acid on

### MANUAL TRANSMISSION

When a push start is necessary turn off all electrical loads such as heaters, radio, and if possible, lights, turn on the key, depress the clutch, and place the shift lever in high gear. Release the clutch when your speed reaches 10 to 15 miles per hour.

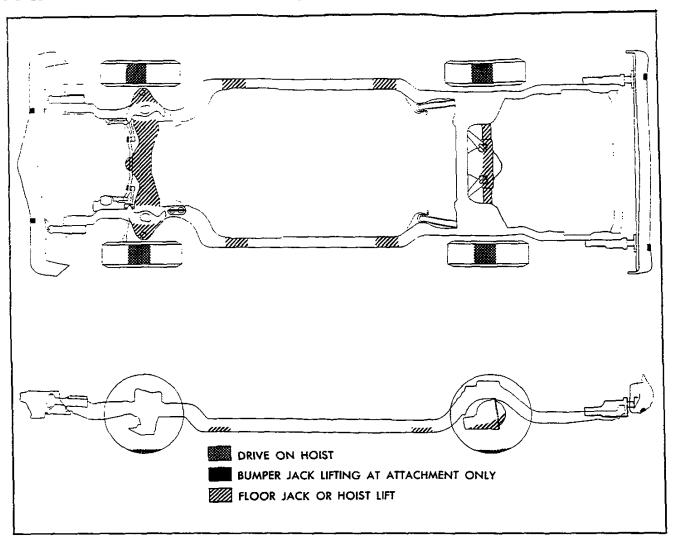


Fig. 1-Vehicle Lifting Points-Chevrolet

### TOWING VEHICLES

The car may be towed safely on its rear wheels with the (selector lever in "N" (Neutral) position at speeds of 35 miles per hour or less under most conditions.

However, the drive shaft must be disconnected or the car towed on its front wheels if 1) Tow speeds in excess of 35 MPH are necessary, 2) Car must be towed for extended distances (over 50 miles) or, 3) Transmission is not operating properly. If car is towed on its front wheels, the steering wheel should be secured to maintain a straight ahead position.

### LIFTING VEHICLES

Many dealer service facilities and service stations are now equipped with a type of automotive hoist which must bear upon some part of the frame in order to lift the vehicle. In Figures 1 through 5 the shaded areas indicate areas recommended for hoist contact.

NOTE: The vehicle should never be lifted by the rear lower control arms.

### LIFTING THE CORVETTE

Shaded areas in Figure 5 indicate recommended points for hoist or jack contact. When using a single post hoist place hoist on frame side rail behind kickup at front and forward of #3 body mount at rear. When using a twinpost hoist, two methods are recommended.

- a. If no rear axle or suspension work is contemplated, use either suspension adapters or drive-on adapters at the front, and drive-in adapters at the rear. If a need for axle work develops, use jack stands beneath the frame side rails on each side and lower rear post.
- b. If rear axle work is contemplated, use either suspension adapters or drive-on adapters at the front and frame lift adapters as shown in Figure 6. If frame lift adapters are not available, use jack stands.

NOTE: Wooden blocks, bolted to steel beam shown in Figure 6 are necessary to allow beam to clear exhaust system.

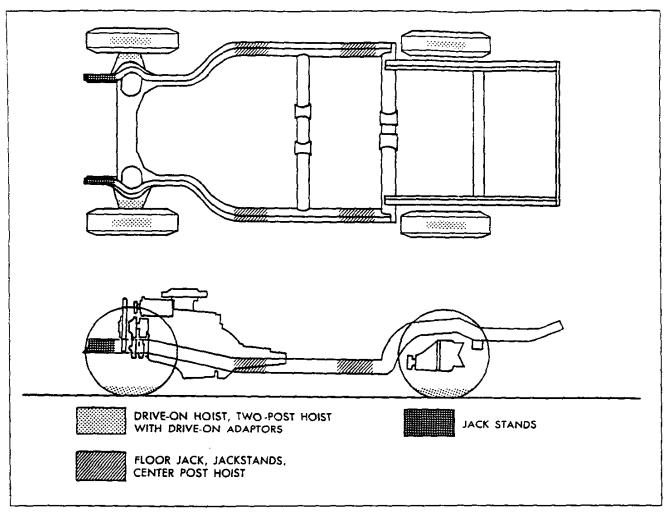


Fig. 5-Vehicle Lifting Points-Corvette

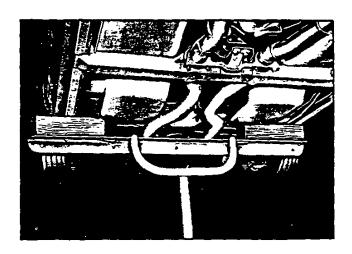


Fig. 6-Frame Lift Adapters-Corvette

### LUBRICATION

### INDEX

Engine	0-11
Crankcase Capacities	0-11
Lubrication	0-1 i
Engine Oil and Filter Recommendations	0-11
Checking Oil Level	0-12
Checking Oil Level	0-12
Types of Oil	0-12
Positive Crankcase Ventilation (P.C.V.) Valve	0-12
Air Injection Reactor (A.I.R.)	0-12
Controlled Combustion System (C.C.S.)	0-12
Exhaust Gas Recirculation System (EGR)	0-12
GM Evaporation Control System (E.C.S.)	0-13
Manifold Heat Control Valve	0-13
Engine Oil Filter	0-13
Air Cleaner	0-13
Oil Wetted Paper Element Type	0-13
Fuel Filter	0-13
Distributor Cam Lubricator	0-13
Rear Axle	0-13

The time or mileage intervals on the following pages are intended as a general guide for establishing regular maintenance and lubrication periods for your Chevrolet built vehicle. Sustained heavy duty or high speed operations or operation under adverse conditions may necessitate more frequent servicing.

### **ENGINE**

### CRANKCASE CAPACITY

- 6 Cylinder.... 4 qt. (US meas.) 3.25 qt. Imperial meas. 8 Cylinder (350)..... 4 qt. (US meas.) 3.25 qt. Imperial meas.
- 8 Cylinder (400)..... 4 qt. (US meas.) 3.25 qt. Imperial meas.
- 8 Cylinder (454)..... 4 qt. (US meas.) 3.25 qt. Imperial meas.

With filter change; add 1 qt. (US measure) .75 qt. Imperial measure for 6 and 8 Cyl. engines.

### LUBRICATION

Crankcase oil should be selected to give the best performance under the climatic and driving conditions in the territory in which the vehicle is driven.

During warm or hot weather, an oil which will provide adequate lubrication under high operating temperatures is required.

During the colder months of the year, an oil which will permit easy starting at the lowest atmospheric temperature likely to be encountered, should be used.

When the crankcase is drained and refilled, the crankcase oil should be selected, not on the basis of the

Transmission	
Control Linkage	0-13
Clutch Cross Shaft	0-13
Automatic Transmissions	0-14
Chassis	0-14
Chassis Lubrication	0-14
Front Wheel Bearings	0-14
Brake Master Cylinder	
Parking Brake	0-15
Steering Gear	0-15
Power Steering System	.0-15
Electrical	
Battery Care (Energizer)	0-15
Hood Latches	
Air Conditioning	0-15
Body Lubrication	0-15
Body Lubrication Points (Corvette)	
Complete Maintenance Schedule	

existing temperature at the time of the change, but on the lowest temperature anticipated for the period during which the oil is to be used.

Unless the crankcase oil is selected on the basis of viscosity or fluidity of the anticipated temperature. difficulty in starting will be experienced at each sudden drop in temperature.

### Engine Oil and Filter Recommendations

- Use only SE engine oil.
- Change oil each 4 months or 6,000 miles. If more than 6,000 miles are driven in a 4-month period. change oil each 6,000 miles.
- Change oil each 2 months or 3.000 miles, whichever occurs first, under the following conditions:
  - driving in dusty conditions.
  - trailer pulling.
  - extensive idling.
  - short-trip operation at freezing temperatures (engine not thoroughly warmed-up).
- Operation in dust storms may require an immediate oil change.
- Replace the oil filter at the first oil change, and every second oil change thereafter. AC oil filters provide excellent engine protection.

The above recommendations apply to the first change as well as subsequent oil changes. The oil change for your Chevrolet engine is based on the use of SE oils and quality oil filters. Oil change intervals longer than those listed above will seriously reduce engine life and may affect Chevrolet obligation under the provisions of the New Vehicle Warranty.

 
A high quality SE oil was installed in your engine at the factory. It is not necessary to change this factory-installed oil prior to the recommended normal change period. However, check the oil level more frequently during the break in period since higher oil consumption is normal until the piston rings become seated.

NOTE: Non-detergent and other low quality oils are specifically not recommended. Only the use of SE engine oils and proper oil and filter change intervals assure you of continued reliability and performance from your Chevrolet engine.

### Checking Oil Level

The engine oil should be maintained at proper level. The best time to check it is before operating the engine or as the last step in a fuel stop. This will allow the oil accumulation in the engine to drain back in the crankcase. To check the level, remove the oil gauge rod (dip stick), wipe it clean and reinsert it firmly for an accurate reading. The oil gauge rod is marked "FULL" and "ADD". The oil level should be maintained in the safety margin, neither going above the "FULL" line nor below the "ADD" line. Reseat the gauge firmly after taking the reading.





- 5W-20 oil is not recommended for sustained high speed driving.
- SAE 30 oils may be used at temperatures above 40°F.
- SAE 5W-30 Viscosity oil is recommended for all seasons in vehicles normally operated in Canada.

NOTE: The oil gauge rod is also marked "Use SE Engine Oil" as a reminder to use only SE oils.

### Supplemental Engine Oil Additives

The regular use of supplemental additives is specifically not recommended and will increase operating costs. However, supplemental additives are available that can effectively and economically solve certain specific problems without causing other difficulties. For example, if higher detergency is required to reduce varnish and sludge deposits resulting from some unusual operational difficulty, a thoroughly tested and approved additive—"Super Engine Oil Supplement" is available at your Chevrolet dealer. In the event of an operational problem, consult your dealer for advice before using supplemental additives.

### Types of Oil

The Letter Designation "SE" has been established to correspond with the requirements of GM 6136-M as revised. "SE" engine oils will be better quality and perform better than those identified with "SA" through "SD" designations, and are recommended for all Chevrolet passenger cars regardless of model year and previous engine oil quality recommendations.

The letter designations for passenger car service and their relationship to GM specifications are described on the following chart.

# POSITIVE CRANKCASE VENTILATION VALVE

Every 24.000 miles or 24 months the valve should be replaced. Connecting hoses, fittings and flame arrestor should be cleaned. At every oil change the system should be tested for proper function and serviced, if necessary.

# AIR INJECTION REACTOR SYSTEM (A.I.R.) CONTROLLED COMBUSTION SYSTEM (C.C.S.)

The Air Injection Reactor system should have the drive belt inspected for wear and tension every 12 months or 12.000 miles, whichever occurs first. In addition, complete effectiveness of either system, as well as full power and performance, depends upon idle speed, ignition timing, and idle fuel mixture being set according to specifications. A quality tune-up which includes these adjustments should be performed periodically to assure normal engine efficiency, operation and performance.

# EXHAUST GAS RECIRCULATION SYSTEM (E.G.R.)

At 12-month/12.000 mile intervals when operating with leaded fuels or at 24-month/24.000 mile intervals when using unleaded fuels remove, inspect, and if deposits

# ENGINE OIL PERFORMANCE AND ENGINE SERVICE CLASSIFICATION SYSTEM CHEVROLET PASSENGER CARS

Letter Designation	GM Specification	Applicable Chevrolet Model Year
SA	None	None
SB	None	None
sc	GM 4745-M	1967 and Prior Years
SD	GM 6041-M (1968 Release)	1970 and Prior Years
SE	GM 6136-M 1972	1974 and Prior Years

exist, clean the EGR valve. Inspect the EGR passages in the inlet manifold and clean as required. A damaged EGR valve must be repaired or replaced.

### GM EVAPORATION CONTROL SYSTEM

Every 24 months or 24,000 miles (More often under dusty conditions) the filter in the base of the canister must be replaced and the canister inspected.

### MANIFOLD HEAT CONTROL VALVE

Every 6.000 miles or 4 months, check valve for freedom of operation. If valve shaft is sticking, free it up with GM Manifold Heat Control Solvent or its equivalent.

### AIR CLEANER

CAUTION: Do not remove the engine air cleaner unless temporary removal is necessary during repair or maintenance of the vehicle. When the air cleaner is removed, backfiring can cause fire in the engine compartment.

NOTE: Under prolonged dusty driving conditions, it is recommended that these operations be performed more often.

### Oil Wetted Paper Element Type— L-6 Engine

Replace every 12,000 miles.

### V-8 Engine

First 12,000 miles inspect element for dust leaks, holes or other damage. Replace if necessary. If satisfactory, rotate element 180° from originally installed position. Replace at 24,000 miles. Element must not be washed, oiled, tapped or cleaned with an air hose.

# Crankcase Ventilation Fifter (Located within Air Cleaner)

If so equipped, inspect at every oil change and replace if necessary. Replace at least every 24,000 miles: more often under dusty driving conditions.

### **FUEL FILTER**

Replace filter element located in carburetor inlet every 12 months or 12,000 miles whichever occurs first, or, if an in-line filter is also used, every 24,000 miles.

Replace in-line filter every 24,000 miles.

### DISTRIBUTOR

Remove distributor cap and rotate lubricator 1/2 turn at 12,000 mile intervals. Replace at 24,000 mile intervals.

# REAR AXLE AND 3-SPEED 4-SPEED TRANSMISSIONS

The passenger car operates under the most severe lubrication conditions at high speed and requires a hypoid lubricant which will meet this condition.

### RECOMMENDED LUBRICANTS

Standard Rear Axles—SAE 80 or SAE 90 GL-5 Gear Lubricant. (For vehicles normally operated in Canada use SAE80 GL-5 gear lubricant).

Drain and refill at first 12,000 miles then maintain same as standard axle.

**CAUTION:** Straight Mineral Oil gear lubricants must not be used in hypoid rear axles.

Manual transmissions—SAE 80 or SAE 90 GL-5 gear lubricant. If temperatures of below 32 F, are expected use SAE 80 GL-5 gear lubricant only.

### Lubricant Additions-Manual Transmission

The lubricant level in the transmission housing should be checked periodically. (Every 6.000 miles or 4 months)

It is recommended that any additions required to bring up the lubricant level be made using the same type lubricant already in the housing (SAE 80 or SAE 90 GL-5 Gear Lubricant). (For vehicles normally operated in Canada use SAE80 GL-5 gear lubricant).

When checking lubricant level in transmission or rear axle the unit being checked should be at operating temperature. With unit at operating temperature the lubricant should be level with bottom of the filler plug hole. If the lubricant level is checked with the unit cold the lubricant level should be 1/2 inch below the filler plug hole. If temperature of below 32 F. are expected use SAE 80 GL-5 Gear Lubricant only.

### Lubrication Additions—Rear Axle—Standard

Every 4 months or 6.000 miles, whichever occurs first: Check lubricant level, and add lubricant if necessary to fill to level of filler plug hole. Use SAE 80 or AE 90 GL-5 Gear Lubricant. (For vehicles normally operated in Canada use SAE 80 GL-5 gear lubricant).

### **Lubricant Changes**

The rear axle lubricant does not normally require changing for the life of the vehicle. If additions are needed, or when refilling the axle after service procedures, use lubricants described above. However, if vehicle is used to pull a trailer, change lubricant every 12,000 miles.

# Transmission Shift Linkage (Manual and Automatic)

Every 6000 miles or 4 months lubricate shift linkage and on manual transmission floor controls lever contacting faces with water resistant EP chassis lubricant which meets GM Specification 6031M.

### Clutch Cross-Shaft

Periodic lubrication of the clutch cross shaft is not required. At 36,000 miles or sooner, if necessary; remove plug, install lube fitting and apply EP CHASSIS

LUBRICANT which meets GM Specification GM 6031M.

### **AUTOMATIC TRANSMISSIONS**

NOTE: At first transmission fluid change, it is recommended that the turbo hydramatic 250 intermediate band be adjusted as specified in Section 7 of this manual.

### TURBO HYDRA-MATIC 250 AND 350

# Automatic Transmission Fluid Recommendations

Use only automatic transmission fluids identified with the mark DEXRON? If or DEXRON?. These fluids have been specially formulated and tested for use in your automatic transmission, and are available at Chevrolet dealers or local service stations.

Check the fluid level at each engine oil change period. To make an accurate fluid level check.

Drive car several miles, making frequent starts and stops. To bring transmission up to normal operating temperature (approximately 180-190 F).

Park car on a level surface.

Place selector lever in "Park" and leave engine running.

Remove dipstick and wipe clean.

Reinsert dipstick until cap seats.

Remove dipstick and note reading.

If fluid level is at or below the ADD mark, add sufficient fluid to raise the level to the FULL mark one pint raises the level from ADD to FULL. Do not overfill.

Under normal driving conditions, the transmission fluid should be changed every 24,000 miles. If your car is driven extensively in heavy city traffic during hot weather, or is used to pull a trailer, change fluid every 12,000 miles. Likewise operators of cars in commercial use such as taxicab, limousine (or patrol car service) where the engine idles for long periods, should change fluid every 12,000 miles.

Every 24.000 miles (every 12.000 if vehicle is driven; extensively in heavy city traffic during hot weather; or is in commercial use, such as a taxicab, limousine or patrol car service, where the engine idles for long periods or is used to pull a trailer) remove fluid from the transmission sump and add 2.5 quarts U.S. measure (2.0 quarts Imperial measure). Operate transmission through all ranges and check fluid level as described above.

### Turbo Hydra-Matic 400

Lubrication for the Turbo Hydra-Matic 400 will, except for fluid capacity and filter change listed below, follow the recommendations above. After checking transmission fluid level it is important that the dipstick be pushed all the way into the fill tube.

Every 24,000 miles after removing fluid from the transmission sump. approximately 7-1/2 pints U.S.

measure (6.25 pints (mperial measure) of fresh fluid will be required to return level to proper mark on the dipstick.

Every 24,000 miles the transmission sump filter should be replaced.

### **CHASSIS**

### CHASSIS LUBRICATION

For chassis lubrication, consult the lubrication chart. It shows the points to be lubricated and how often the lubricant should be applied.

The term chassis lubricant" as used in this manual, describes a water resistant EP chassis lubricant which meets GM Specification GM 6031M designed for application by commercial pressure gun equipment.

### REAR UNIVERSAL JOINT FITTING

Every 6.000 miles or 4 months—lubricate universal joint with water resistant EP Chassis Lubricant Part number 1050679 which meets GM Specification 6040M.

### FRONT WHEEL BEARINGS

It is necessary to remove the wheel and hub assembly to lubricate the bearings. The bearing assemblies should be cleaned before repacking with lubricant. Do not pack the hub between the inner and outer bearing assemblies or the hub caps, as this excessive lubrication results in the lubricant working out into the brake drums and linings.

Front wheels of all passenger car models are equipped with tapered roller bearings and should be packed every 24.000 miles with a high melting point water resistant front wheel bearing lubricant. On units equipped with disc brakes, use wheel bearing lubricant GM Part No. 1051344 or equivalent. This is a premium high melting point lubricant.

CAUTION: "Long fibre" or "viscous" type lubricant should not be used. Do not mix wheel bearing lubricants. Be sure to thoroughly clean bearings and hubs of all old lubricant before repacking.

The proper adjustment of front wheel bearings is one of the important service operations that has a definite bearing on safety. A car with improperly adjusted front wheel bearings lacks steering stability, has a tendency to wander or shimmy and may have increased tire wear. The adjustment of these bearings is very critical. The procedure is covered in Section 3 of this manual under Front Wheel Bearings—Adjust.

### BRAKE MASTER CYLINDER

Check level every 6,000 miles or 4 months and maintain 1/4" below lowest edge of each filler opening with DOT-3 or GM Hydraulic Brake Fluid Supreme No. 11 or equivalent.

### PARKING BRAKE

Every 6.000 miles or 4 months, apply water resistant lubricant which meets GM Specification GM 6031M to parking brake cable, cable guides and at all operating links and levers.

### STEERING GEAR

### Manual

The steering gear is factory-filled with steering gear lubricant. Seasonal change of this lubricant should not be performed and the housing should not be drained no lubrication is required for the life of the steering gear.

Every 36,000 miles, the gear should be inspected for seal leakage (actual solid grease - not just oily film). If a seal is replaced or the gear is overhauled, the gear housing should be refilled with #1051052 (13 oz. container) Steering Gear Lubricant which meets GM Specification GM 4673M, or its equivalent.

NOTE: Do not use EP Chassis Lube to lubricate the gear. DO NOT OVER-FILL the gear housing.

### **Power Steering System**

Check the fluid level in the pump reservoir at each oil change period. Add GM Power Steering Fluid (or DEXRON®II or DEXRON® Automatic Transmission Fluid) as necessary to bring level into proper range on filler cap indicator depending upon fluid temperature.

If at operating temperature (approximately 150° F-- hot to the touch), fluid should be between "HOT" and "COLD" marks. If at room temperature (approximately 70° F), fluid should be between "ADD" and "COLD" marks. Fluid does not require periodic changing.

### Power Steering Valve Adapter-Corvette

Every 4 months or 6.000 miles, whichever occurs first, lubricate the power steering valve adapter with EP chassis lubricant which meets G.M. Specification GM 6031.

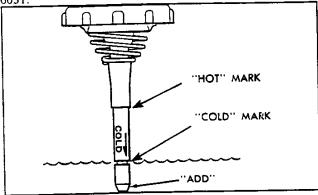


Fig. 7-Power Steering Filler Cap Indicator

### **ELECTRICAL**

### BATTERY CARE (ENERGIZER)

Energizer—Check fluid level monthly. If the fluid level is low, add only colorless, odorless drinking water or distilled water to bring level to split ring in filler opening.

### HOOD LATCHES

Every 4 months or 6.000 miles, whichever occurs first, lubricate hood latch assembly and hood hinge assembly as follows:

- Wipe off any accumulation of dirt or contamination on latch parts.
- Apply Lubriplate or equivalent to latch pilot bolts and latch locking plate.
- Apply light engine oil to all pivot points in release mechanism. as well as primary and secondary latch mechanisms.
- Lubricate hood hinges.
- 5. Make hood hinge and latch mechanism functional check to assure the assembly is working correctly.

### AIR CONDITIONING

Every 6,000 miles or 4 months check sight glass under the hood, after the system has been in operation for several minutes. Sight glass should be clear but may, during milder weather, show traces of bubbles. Foam or dirt indicate a leak which should be repaired immediately.

### **BODY LUBRICATION**

See Body Service Manual for Body Lubrication. (Except Corvette)

### BODY LUBRICATION POINTS (CORVETTE)

Lubricate the following items when possible.

Hood Latch Mechanism and Hinges-Apply light engine oil to pivot points. Don't oil lock pins or catch plates.

Rear Compartment Lid Release and Hinges-Apply light engine oil.

Side Door Hinge Pins-Apply light engine oil.

Door Lock Rotor and Strike Plate-Apply light engine oil or stainless stick lubricant.

Lock Cylinders - Lubricate with powdered graphite.

Window Regulators and Controls and Door Lock Remote Link - Apply light engine oil.

Gas Tank Filler Cap Hinge - Apply light engine oil.

Weatherstrips and Rubber Bumpers - Coat lightly with a rubber lubricant.

# COMPLETE VEHICLE MAINTENANCE SCHEDULE

Item No.	Services (For Details, See Numbered Paragraphs)
1	Chassis Lubrication
<del></del>	**Fluid Levels
	*Engine Oil
	Air Conditioning System
	Tire Rotation
	*Engine Oil Filter
	Rear Axle
	*Cooling System
	Wheel Bearings  *Automatic Transmission
	Manual Steering Gear and Clutch Cross Shaft
	Owner Safety Checks
	Tires and Wheels
	Exhaust System
	*Drive Belts
	Suspension and Steering
	Brakes and Power Steering
	Disc Brakes
	Drum Brakes and Parking Brake
	Throttle Linkage
<u> </u>	Headlights
22	Underbody
23	Bumpers
24	Thermostatically Controlled Air Cleaner
25	Carburetor Choke
26	Timing, Dwell, Carb. Idle, Distr. and Coil
27	Manifold Heat Valve
28	Carburetor Mounting
29	Spark Plugs (Vehicles using leaded fuels)
	EGR System (Vehicles using leaded fuels)
	Carburetor Fuel Inlet Filter
<del></del>	Thermal Vacuum Switch and Hoses
	Vacuum Advance Solenoid and Hoses
1	Transmission Control Switch
	Idle Stop Solenoid
-	PCV System Engine Compression
	ECS System
<del></del>	Fuel Cap, Tank and Lines
	Mechanical Valve Lifters (Vega)
	No.   1   2   3   4   5   6   7   8   9   10   11   12   13   14   15   16   17   18   19   20   21   22   23   24   25   26   27   28   28

<sup>\*</sup>Also an Emission Control Service

Complete Vehicle Maintenance Schedule Art

<sup>\*</sup>Also a Safety Service

# EXPLANATION OF COMPLETE VEHICLE MAINTENANCE SCHEDULE

Presented below is a brief explanation of each of the services listed in the preceding Complete Vehicle Maintenance Schedule.

Vehicle operation under conditions such as heavy dust. continuous short trips, use of other than unleaded or low lead fuels or pulling trailers, is not considered normal use and therefore more frequent maintenance will be required. Such additional maintenance requirements are included where applicable. Refer to the appropriate section of this manual for additional details on specific services. A listing of recommended lubricants and fluids is included at the end of this listing.

### LUBE AND GENERAL MAINTENANCE

- 1. CHASSIS—Lubricate all grease fittings in front suspension, steering linkage, and constant velocity universal joint. Also lubricate transmission shift linkage, hood latch, hood hinges, and parking brake cable guides and linkage.
- 2. FLUID LEVELS—Check level of fluid in brake master cylinder\*, power steering pump\*, battery, engine\*\*. axle, transmission\*\* and windshield washer\*. Engine coolant should be checked for proper level and freeze protection to at least -20°F or to the lowest temperature expected during the period of vehicle operation.\*\* Proper engine coolant also provides corrosion protection.

Any significant fluid loss in any of these systems or units could mean that a malfunction is developing and corrective action should be taken immediately. A low fluid level in the brake master cylinder front reservoir could also be an indicator that the disc brake pads need replacing.

- 3. ENGINE OIL\*\*—Change each 4 months or 6.000 miles, whichever occurs first, or each 2 months or 3.000 miles when the vehicle is operated under the following conditions: (a) driving in dusty conditions. (b) trailer pulling. (c) extensive idling or (d) short-trip operation at freezing temperatures (with engine not thoroughly warmed-up). See elsewhere in this section for additional details on engine oil.
- AIR CONDITIONING—Check condition of air conditioning system hoses and refrigerant charge at sight glass (if so equipped). Replace hoses and/or refrigerant if need is indicated.
  - \*Also a Safety Service
  - \*\*Also an Emission Control Service

- 5. TIRES—To equalize wear, rotate tires as illustrated in Section 10 of this manual and adjust tire pressures as shown on tire placard on rear face of driver's door.
- 6. **ENGINE OIL FILTER**—Replace at the first oil change and every other oil change thereafter.
- REAR AXLE-Change lubricant at first 12.000 miles on Positraction axles. Change lubricant every 12.000 miles on all type rear axles or final drives when using vehicle to pull a trailer.
- 8. COOLING SYSTEM-At 12-month or 12.000 mile intervals, wash radiator cap and filler neck with clean water, pressure test system and radiator cap for proper pressure holding capacity, (tighten hose clamps and inspect condition of all cooling and heater hoses\*\*). Replace hoses every 24 months or 24.000 miles or earlier if checked, swollen or otherwise deteriorated.

Also each 12 months or 12.000 miles, clean exterior of radiator core and air conditioning condenser.\*\* Every 24 months or 24.000 miles, drain, flush, and refill the cooling system with a new coolant solution.\*\*

- WHEEL BEARINGS—Clean and repack front wheel bearings with a lubricant as specified in the "Reccommended Fluids & Lubricants" chart in the section.
- 10. AUTOMATIC TRANSMISSION FLUID\*\*-Under normal driving conditions, change the transmission fluid and service the sump filter every 24,000 miles. Under unusual conditions such as constant driving in heavy city traffic during hot weather, trailer pulling, etc., these services should be performed at 12,000-mile intervals. See elsewhere in this manual for further details on transmission care.
- 11. MANUAL STEERING GEAR—Check for seal leakage around the pitman shaft and housing. If leakage is evident (solid grease oozing out—not just oily film), it should be corrected immediately. Lubricate clutch cross shaft lever.

### SAFETY MAINTENANCE

12. SAFETY CHECKS TO BE PERFORMED BY OWNER—Listed below are the safety checks that should be made by the owner (items a thru u). These checks should be made regularly during operation, at no greater interval than 4 months or 6.000 miles, whichever occurs first, and more often when the need is indicated. Any deficiencies should

be brought to the attention of the dealer or another service outlet, as soon as possible.

- a. STEERING COLUMN LOCK—Check for proper operation by attempting to turn key to LOCK position in the various transmission gears with car stationary. Key should turn to LOCK position only when transmission control is in PARK on automatic transmission models or in reverse on manual transmission models. Key should be removable only in LOCK position.
- b. PARKING BRAKE AND TRANSMISSION "PARK" MECHANISM—Check parking brake holding ability by parking on a fairly steep hill and restraining the vehicle with the parking brake only. On cars with automatic transmissions, check the holding ability of the "PARK" mechanism by releasing all brakes after the transmission selector lever has been placed in the "P" position.

CAUTION: Before making the two checks below, be sure to have a clear distance ahead and behind the car, set the parking brake and firmly apply the foot brake. Do not depress accelerator pedal. Be prepared to turn off ignition switch immediately if engine should start.

- c. STARTER SAFETY SWITCH (AUTOMATIC TRANSMISSION CARS)—Check starter safety switch by placing the transmission in each of the driving gears while attempting to start the engine. The starter should operate only in the Park ("P") or Neutral ("N") positions.
- d. STARTER SAFETY SWITCH (MANUAL TRANSMISSION CARS)—To check, place the shift lever in neutral, depress the clutch halfway, and attempt to start. The starter should operate when clutch is fully depressed.
- e. TRANSMISSION SHIFT INDICATOR—Check to be sure automatic transmission shift indicator accurately indicates the shift position selected.
- f. STEERING—Be alert to any changes in steering action. The need for inspection or servicing may be indicated by "hard" steering, excessive free play or unusual sounds when turning or parking.
- g. WHEEL ALIGNMENT AND BALANCE—In addition to abnormal tire wear, the need for wheel alignment service may be indicated by a pull to the right or left when driving on a straight and level road. The need for wheel balancing is usually indicated by a vibration of the steering wheel or seat while driving at normal highway speeds.
- h. BRAKES—Be alert to illumination of the brake warning light or changes in braking action, such as repeated pulling to one side, unusual sounds when braking or increased brake pedal travel.

- Any of these could indicate the need for brake system inspection and/or service.
- EXHAUST SYSTEM—Be alert to any change in the sound of the exhaust system or a smell of fumes which may indicate a leak.
- j. WINDSHIELD WIPERS AND WASHERS—Check operation of wipers, as well as condition and alignment of wiper blades. Check amount and direction of fluid sprayed by washers during use.
- k. **DEFROSTERS**—Check performance by moving controls to "DEF" and noting amount of air directed against the windshield.
- REARVIEW MIRRORS AND SUN VISORS— Check that friction joints are properly adjusted so mirrors and sun visors stay in the selected position.
- m. HORN—Blow the horn occasionally to be sure that it works.
- n. LAP AND SHOULDER BELTS—Check belts. buckles, adjustable latch plates, retractors, interlock and reminder systems, guide loops, clips, and anchors for proper operation. Check to make certain that anchor mounting bolts are tight.
- o. HEAD RESTRAINTS—Check that head restraints, if present, adjust properly in the up detent positions, and that no components are missing, damaged or loose.
- p. SEAT BACK LATCHES—Check to see that seat back latches are holding by pulling forward on the top of each folding seat back with doors closed if equipped with automatic seat back latches.
- q. LIGHTS AND BUZZERS—Check all instrument panel illuminating and warning lights, seat belt reminder light and buzzer, ignition key buzzer, interior lights, license plate lights, side marker lights, headlamps, parking lamps, tail lamps, brake lights, turn signals, backup lamps, and hazard warning flashers. Have someone observe operation of each exterior light while you activate the controls.
- r. GLASS—Check for broken, scratched, dirty or damaged glass on vehicle that could obscure vision or become an injury hazard.
- s. **DOOR LATCHES** Check for positive closing, latching and locking.
- t. HOOD LATCHES—Check to make sure hood closes firmly by lifting on the hood after each closing. Check also for broken, damaged or missing parts which might prevent secure latching.
- u. FLUID LEAKS—Check for fuel, water, oil or other fluid leaks by observing the ground beneath the vehicle after it has been parked for a while. (Water dripping from air conditioning

<sup>\*</sup>Also a Safety Service

<sup>\*\*</sup>Also an Emission Control Service

system after use is normal.) If gasoline tumes or fluid are noticed at any time, the cause should be determined and corrected without delay because of the possibility of fire.

- 13. TIRES AND WHEELS—Check tires for excessive wear, nails, glass, cuts or other damage. Make certain wheels are not bent or cracked and wheel nuts are tight. Uneven or abnormal tire wear may indicate the need for alignment service. Tire inflation pressure should be checked by the owner at least monthly, or more often if daily visual inspection indicates the need. Refer to tire placard on rear face of driver's door for recommended pressures and Section 10 in this manual for information on tire tread wear indicators.
- 14. **EXHAUST SYSTEM**—Check complete exhaust system and nearby body areas and trunk lid for broken, damaged, missing or mispositioned parts, open seams, holes, loose connections or other deterioration which could permit exhaust fumes to seep into the trunk or passenger compartment. Dust or water in the trunk may be an indication of a problem in one of these areas. Any defects should be corrected immediately. To help insure continued integrity, exhaust system pipes and resonators rearward of the muffler must be replaced whenever a new muffler is installed.
- 15. ENGINE DRIVE BELTS\*\*-Check belts driving fan. AIR pump. Delcotron. power steering pump and air conditioning compressor for cracks. fraying, wear and tension.\*\* Adjust or replace as necessary.

It is recommended that belts be replaced every 24 months or 24,000 miles, whichever occurs first.

- 16. SUSPENSION AND STEERING—Check for damaged, loose or missing parts, or parts showing visible signs of excessive wear or lack of lubrication in front and rear suspension and steering system. Questionable parts noted should be replaced without delay.
- 17. BRAKES AND POWER STEERING—Check lines and hoses for proper attachment, leaks, cracks, chafing, deterioration, etc. Any questionable parts noted should be replaced or repaired immediately. When abrasion or wear is evident on lines or hoses, the cause must be corrected.
- 18. DISC BRAKES—Be alert for disc brake wear indicator sound (see Section 5 in this manual for descriptive details). Check brake pads and condition of rotors while wheels are removed during tire rotation. (Note below regarding more frequent checks also applies to disc brakes.)
- 19. DRUM BRAKES AND PARKING BRAKE—Check drum brake linings and other internal brake components at each wheel (drums, wheel cylinders, etc.). Parking brake adjustment also should be checked for drag and lubricated at every chassis lube period.
  - Also a Safety ServiceAlso an Emission Control Service

- NOTE: More frequent checks should be made if driving conditions and habits result in frequent brake application.
- THROTTLE LINKAGE—Check for damaged or missing parts, interference or binding. Any deficiencies should be corrected without delay.
- HEADLIGHTS—Check for proper aim. Correct as necessary. More frequent checks should be made if oncoming motorists signal when lights are already on low beam, or if illumination of the area ahead seems inadequate.
- 22. UNDERBODY—In geographic areas using a heavy concentration of road salt or other corrosive materials for snow removal or road dust control. flush and inspect the complete under side of the car at least once each year, preferably after a winter's exposure. Particular attention should be given to cleaning out underbody members where dirt and other foreign materials may have collected.
- 23. BUMPERS—Check the front and rear bumper systems at 12-month/12.000 mile intervals to be sure that impact protection and clearance originally designed into these systems remain in a state of full readiness. It also should be checked whenever there is obvious bumper misalignment, or whenever the vehicle has been involved in a significant collision in which the bumper was struck, even when slight or no damage to the bumper system can be seen.

### **EMISSION CONTROL MAINTENANCE**

- 24. THERMOSTATICALLY CONTROLLED AIR CLEANER—Inspect installation to make certain that all hoses and ducts are connected and correctly installed. Also check valve for proper operation.
- 25. CARBURETOR CHOKE—Check choke mechanism for free operation. Any binding condition which may have developed due to petroleum gum formation on the choke shaft or from damage should be corrected.
- 26. TIMING, DWELL, CARBURETOR IDLE, DISTRIBUTOR AND COIL—Adjust ignition timing, dwell and carburetor idle speed accurately (following the specifications shown on the label under the hood) at the first 4 months or 6,000 miles of operation then at 12-month or 12,000-mile intervals. Adjustments must be made with test equipment known to be accurate

Replace distributor points every 12 months or 12,000 miles and replace cam lubricator every 24 months or 24,000 miles. In addition, carefully inspect the interior and exterior of the distributor cap, distributor rotor and coil for cracks, carbon tracking, and terminal corrosion. Clean or replace as necessary at 24-month/24,000-mile intervals to prevent misfiring and/or deterioration.

Proper functioning of the carburetor is particularly essential to control of emissions. Correct mixtures for emission compliance and idle quality have been preset

by Chevrolet. Plastic idle mixture limiters have been installed on the idle mixture screws to preclude unauthorized adjustment. These idle limiters are not to be removed unless some major carburetor repair or replacement which affects the idle screw adjustment, has been necessary.

At 24 months or 24.000 miles intervals or in case of a major carburetor overhaul, or when poor idle quality exists, idle mixture should be adjusted by a mechanical method (lean drop). The alternate method for adjusting idle mixture is by CO meter if accurate meter is available.

- 27. MANIFOLD HEAT VALVE—Some engines are equipped with a manifold heat valve which should be inspected and repaired as necessary to insure free operation.
- 28. CARBURETOR MOUNTING—Torque carburetor attaching bolts and/or nuts to compensate for compression of gasket at first 4 months or 6.000 miles of vehicle operation, then at every 24,000 miles thereafter.
- 29. SPARK PLUGS—Replace at 6.000-mile intervals when operating with leaded fuels or at 12.000-mile intervals when using unleaded fuels. Use of leaded fuels results in lead deposits on spark plugs and can cause misfiring at mileages less than 12.000 miles. Where misfiring occurs prior to 6.000 miles, spark plugs in good condition can often be cleaned, tested and reinstalled in an engine with acceptable results.
- 30. EXHAUST GAS RECIRCULATION SYSTEM (EGR)—At 12-month/12,000 mile intervals when operating with leaded fuels or at 24-month/24,000 mile intervals when using unleaded fuels remove, inspect, and if deposits exist, clean the EGR valve. Inspect the EGR passages in the inlet manifold and clean as required. A damaged EGR valve must be repaired or replaced.
- 31. CARBURETOR FUEL INLET FILTER—Replace filter at 12-month/12,000-mile intervals or more frequently if clogged.
- THERMAL VACUUM SWITCH AND HOSES—Check for proper operation. A malfunctioning switch must be replaced. Check hoses for proper connection. cracking, abrasion or deterioration and replace as necessary.
- 33. VACUUM ADVANCE SOLENOID AND HOSES—
  Check both the vacuum and electrical functions of this valve. An inoperative or leaking valve should be replaced. Check condition of wires and connections. Check hoses for proper connection, cracking, abrasion or deterioration and replace as necessary.
- 34. TRANSMISSION CONTROL SWITCH—Check the electrical function of this switch. An inoperative switch should be replaced. Check condition of wires and connections.

- IDLE STOP SOLENOID—Check for proper operation. An inoperative solenoid must be replaced.
- 36. POSITIVE CRANKCASE VENTILATION SYSTEM (PCV)—Check the PCV system for satisfactory operation at 12-month or 12,000-mile intervals using a tester. Replace the PCV valve at 24-month or 24,000 mile intervals, blow out PCV valve hose with compressed air and replace the filter. The PCV valve should be replaced at 12-month or 12,000 mile intervals when the vehicle is used in operations involving heavy dust, extensive idling, trailer pulling, and short trip use at freezing temperatures where engine does not become thoroughly warmed-up.

The PCV filter should be replaced at 12-month/12.000-mile intervals under dusty driving conditions.

- 37. **ENGINE COMPRESSION**—Test engine cranking compression. If a problem exists, have correction made. Minimum compression recorded in any one cylinder should not be less than 70% of highest cylinder. For example, if the highest pressure in any one cylinder is 150 pounds, the lowest allowable pressure for any other cylinder would be 105 pounds (150 x 70% = 105).
- 38. EVAPORATION CONTROL SYSTEM (ECS)—Check all fuel and vapor lines and hoses for proper connections and correct routing as well as condition. Remove canister and check for cracks or damage. Replace damaged or deteriorated parts as necessary. Replace filter in lower section of canister.
- 39. FUEL CAP, FUEL LINES AND FUEL TANK—Inspect the fuel tank, cap and lines for damage which could cause leakage. Inspect fuel cap for correct sealing ability and indications of physical damage. Replace any damaged or malfunctioning parts.
- 40. AIR INJECTION REACTOR (AIR) SYSTEM HOSES AND CONNECTIONS—Check AIR system hoses and fittings for loose connections and deterioration. Test diverter valve for proper operation. Malfunctioning diverter valves and deteriorated hoses must be replaced.
- 41. MECHANICAL VALVE LIFTERS (WHERE USED)— Intake and exhaust valves should be adjusted at 24,000 mile intervals.
- 42. AIR CLEANER ELEMENT—Replace the engine air cleaner element under normal operating conditions every 24,000 miles on V-8 engines: 12,000 miles on L-6 engines. Operation of vehicle in dusty areas will necessitate more frequent element replacement.
  - CAUTION: Do not operate the engine without the air cleaner unless temporary removal is necessary during repair or maintenance of the vehicle. When the air cleaner is removed, backfiring can cause fire in the engine compartment.
- SPARK PLUG AND IGNITION COIL WIRES— Inspect spark plug and ignition coil wires for

<sup>\*</sup>Also a Safety Service

<sup>\*\*</sup>Also an Emission Control Service

### **GENERAL INFORMATION AND LUBRICATION 0-21**

evidence of checking, burning, or cracking of exterior insulation and tight fit at distributor cap, coil, and spark plugs. Exterior of wires should be

cleaned: any evidence of corrosion on end terminals removed and wires replaced as necessary to prevent misfiring and/or deterioration.

### **RECOMMENDED FLUIDS & LUBRICANTS**

USAGE	FLUID/LUBRICANT	USAGE
Power steering system	GM power steering fluid	Hood hinges
and pump reservoir	Part No. 1050017 or equivalent—if not available use DEXRON® or DEXRON®	Automatic transmissi shift linkage
	II automatic transmission fluid	Chassis lubrication
Differential—standard	SAE-80 or SAE-90 GL-5 gear lubricant (SAE-80 in Canada)	Constant Velocity Uni
Differential—Positraction	Lubricant GM Part No. 1051022 or equivalent	Automatic transmissi
Manual steering gear	Lubricant GM Part No. 1051052 or equivalent	Parking brake cables
Manual transmission	SAE-80 or SAE-90 GL-5 gear lubricant (SAE-80 in	Front wheel bearings
	Canada)	Body door hinge pins,
Brake system and master cylinder	Delco Supreme 11 fluid or DOT-3	tion wagon tailgate his and linkage, station w folding seat, rear
Clutch linkage (Man. trans. only)		compartment lid hing
a. Pivot points	Engine oil	Convertible door to lo
b. Push rod to clutch fork joint, and cross shaft pressure fitting	Chassis grease meeting requirements of GM 6031-M	wedge plates Windshield washer so
Manual transmission shift linkage, column shift	Engine oil	Energizer (Battery)
Shift linkage, floor shift	Engine oil	
Hood Latch assembly		Engine coolant
a. Pivots and spring anchor	Engine oil	
b. Release pawl	Chassis grease	

USAGE	FLUID/LUBRICANT
Hood hinges	Engine oil
Automatic transmission shift linkage	Engine oil
Chassis lubrication  Constant Velocity Universal  Joint	Chassis grease meeting requirements of GM 6031-M GM Lubricant Part No. 1050679 or grease meeting requirements of GM 6040-M
Automatic transmission	DEXRON® or DEXRON® II automatic transmission fluid
Parking brake cables	Chassis grease
Front wheel bearings	Chassis grease meeting requirements of GM 6031-M
Body door hinge pins, station wagon tailgate hinge and linkage, station wagon folding seat, rear compartment lid hinges.	Engine Oil
Convertible door to lock wedge plates	Stick-type lubricant
Windshield washer solvent	GM Optikleen washer solvent Part No. 1050001 or equivalent
Energizer (Battery)	Colorless, odorless drink- ing water
Engine coolant	Mixture of water and a high quality Ethylene Glycol base type anti-freeze conforming to GM Spec. 1899-M

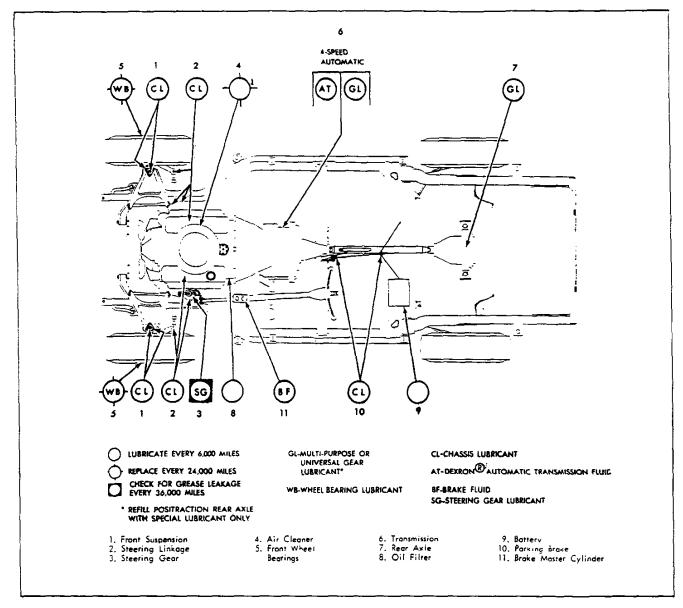


Fig. 12-Lubrication Diagram-Corvette Models

			,

### 1974 VEHICLES WITH STANDARD EQUIPMENT

Prices shown are effective with vehicles shipped on and after May 15, 1974

_	Description	Model Number	Wheel- base	Dealer Invoice Amount'	Dealer Price	Factory D&Hi	List Price	Mfr's Sgt'd Retail Price★	Desti- nation Charge & Group Number	Total
٠	8-Cylinder Engine									
	Coupe—2-PassengerConvertible—2-Passenger with	. 1YZ37	981	•			.00	6081.50	14	
	manually operated folding top.	. 1YZ67	98	•			.00	5845.50	14	

<sup>\*</sup> Manufacturer's Suggested Retail Prices do not include applicable destination charges, state and local taxes, license fees, options or accessories.

### OPTIONS AND ACCESSORIES WHEN INSTALLED BY CHEVROLET

Prices shown are effective with vehicles shipped on and after May 15, 1974

Description	Option Number	Dealer Invoice Amount*	Dealer Price	Factory D&Hs	List Price	Mfr's Suggested Retail Price⇔
REFER TO DEALER ORDER GUIDE F	OR OPT	ION AVA	ILABILI	TY AND	APPLICA	TION
Air Conditioning: Four-Season Axle Ratios:	C60				490.00	490.00
FCONOMY Performance Social Social	G95 G92				12.00 12.00	12.00 12.00
3.36 3.55	YC2 YC3				12.00 12.00	12.00 12.00
Sattery, Heavy-Duty: Included with LS4 454-4 /DE	UA1				15.00	15.00
Belts, Custom Deluxe Shoulder: Driver and passenger. Standard on Coupe	A85				4 1.00	41.00
Brakes, Power: Included with Z07 Off-Road Package California Emission Certification: Includes all testing, equipment and /or certification necessary for registration in the	J50				52.00	52.00
State of California	YF5 C50				21.00 46.00	21.00 46.00
Engines: (Refer to Dealer Order Guide for California Requirements)	230				40.00	40.00
Turbo-Fire 350-4 /DE V8	L48 L82 LS4		NO	ADDITIONAL	316.00 264.00	316.00 264.00
Horns, Dual	U05				4.00	4.00
Light, Map: Mounted on inside rearview mirror  Off-Road Package: Includes special FE7 Gymkhana suspension plus J50 HD front and rear power disc brakes	UF1 Z07				5.00	5.00
Paint, Exterior: Salid  Radio Equipment: Pushbutton. Includes 30" fixed height rear antenna.		• •	NO	ADDITIONAL	400.00 L CHARGE	400.00
AM /FM Radio AM /FM /Stereo Radio	U69 U58				173.00 276.00	173.00 276.00
Roof Cover, Vinyi: Black. Convertible. Includes CO7 auxiliary top	COS				329.00	329.00
Steering, Power	N41				124.00	124.00
Steering Wheel: Tilt-Telescopic	N37				82.00	82.00
Package Tires:	FE7				7.00	7.00
GR70-15 /B Steel Belted Radial Ply Blackwall (Standard) GR70-15 /B Steel Belted Radial Ply White Stripe	MRD		NO	ADDITIONA	35.00	35.00
GR70-15 /B Steel Belted Radial Ply White Lettered	QRZ				48.00	48.00
top. Included with CO8 vinyl roof cover	C07				267.00	267.00

<sup>\*</sup> Dealer Invoice Amount includes Holdback Amount retained for dealer's account in accordance with Vehicle Terms of Sale Bulletin.

<sup>·</sup> Refer to Dealer Order Guide for California Requirements.

<sup>§</sup> D&H amounts reflect provision for pass through of tire weight tax imposed on manufacturer or importer of tires.

State and local taxes not included.

### OPTIONS AND ACCESSORIES WHEN INSTALLED BY CHEVROLET

Prices shown are effective with vehicles shipped on and after May 15, 1974

Description	Option Number	Dealer Invoice Amount	Dealer Price	Factory D&Hs	List Price	Mfr's Suggested Retail Price⇔
REFER TO DEALER ORDER GUIDE F	OR OPT	ION AVA	ILABILIT	Y AND A	PPLICA	TION
Top, Folding: Manually operated. Convertible			NO	ADDITIONAL	CHARGE	
Transmissions: 4-Speed Wide-Range (Standard)	M20		NO	ADDITIONAL	CHARGE	
Turbo Hydra-matic. With L48 350-4 /DE engine	M40				N.C.	N.C.
With L82 Special 350-4 /DE or LS4 454-4 /DE engine	M40 M21				113.00 N.C.	113.00 N.C.
Trim, Interior:			NO	ADDITIONAL	CHARGE	
Custom. Includes leather seat trim, special cut pile carpeting, door trim panels with wood-grained accents and lower carpeting plus wood-grained accents on console				700,,,,	154.00	154,00
Windows, Power: Electric.	A31				93.00	93.00
·····						
		_			-	·· <u>·</u>
		·				
			-			
						•
	•					
					-	
		•		·		
				• • •		
		"		*	· · · · · · · · · · · · · · · · · · ·	
			<u> </u>		·	
				·-	<del></del>	
			T-1			
						<del></del>
		<del></del>			•	
				***		
	·					<del></del>

<sup>\*</sup> Dealer Invoice Amount includes Holdback Amount retained for dealer's account in accordance with Vehicle Terms of Sale Bulletin.

<sup>§</sup> D&H amounts reflect provision for pass through of tire weight tax imposed on manufacturer or importer of tires.

⇒ State and local taxes not included.

ORDER	NO
DATE_	
CUSTO	IER
CALECI	1 4 7 5

REV: 8-17-73 PLEASE REVIEW OPTION RESTRICTIONS BEFORE ORDERING (X) (SUB) OPTION 615A NOTE: PLEASE DISCARD ALL WORKSHEETS C60 AIR CONDITIONING PRIOR TO THIS DATE AXLES: (See Power Teams Chart) G95 --Economy --Performance GRICK --Special. (Req. ZO7 Off-Road MODEL SPEC Pkg.) ---3.08. (Req. LS4 Eng.)
---3.36. (Req. L82 Eng.)
---3.55. (Req. L82 Eng.)
BATTERY, HEAVY-DUTY: (Inct. w/ LS4 Z YC7 YC2 COLOR YC3 617A TRIM LOWER | UPPER UAT Eng.) A85 BELTS, CUSTOM DELUXE: (Incl. on Coupe model) BRAKES, POWER 615A J 50 Coupe Convertible Series CALIFORNIA EMISSION EQUIPMENT 6174 C50 DEFOGGER, REAR WINDOW 1YZ37 17767 Corvette 6161 UF1 LIGHT, MAP (Req. AA OFF-ROAD PACKAGE: (Req. L82 or L\$4 Z07 or BB Top) Eng. and M21 Trans (Incl. FE7 Susp. and J50 Brakes) MUST ORDER ONE: 8-Cyl. Turbo-Fire 350-4/DE RADIO EQUIPMENT: <u>615</u>A 616A **U**E9 -- AM/FM Radic 616A U56 √ UL5 615A --AM/FH/Stereo Radio L82 Turbo-Fire Special 350-4/DE 616A --Radio Not Desired RODE CEVER, VINYL: Black. (Rug. CO7 Top) CD8 Turbo-Jot 454-4/DE. (Incis. UA1 Dattory) LS4 OUICK (X) (X)615A 441 STEERING, POWER STEERING WHEEL: Tilt-Telescopic SUSPENSION, GYMKHANA: (incl. w/ YESISUBIDELETE N37 SPEC N41 Steering, Power
J50 Brakes, Power
C60 Air Conditioning,
M40 Transmission, Turbo Hydra~matic
U69 Radio, AM/FM Z07 Off-Road Pkg.) TIRES: 615A --Steel Beltod Radial Ply 615A QRM ---GR70-15/8 White Stripe ---GR70-15/8 White Lettered TOPS: (Convertible model only) M37 Steering Wheel, Tilt-Telescopic QRZ Tires, GR70-15/B White Lettered 615A QRZ 616A A31 Windows, Power C07 -- Auxiliary Hard Top --Folding CO7 Top, Auxiliary 88 ----Black U58 Radio, AM/FM/Stereo UF1 Light, Map 616A ----White AA TRANSMISSIONS: 615A M20 --4-Spoed Wide-Range UA1 Battery, Hesvy-Outy C50 Defogger, Rear Window 421 615A --4-Spond Close-Ratio. (Req. L82 617A or LS4 Eng.) 615A M40 TRIM, INTERIOR: (See Cotor and " INDICATES OPTION THAT CAN BE Trim Chart) 615A A31 WINDOWS, POWER: Electric SUBSTITUTED BY A SIMILAR OPTION.

REVISED: 8-17-73

DEALER ORDER GUIDE

CORVETTE

### INTERIOR AND EXTERIOR SELECTION CHART

PLEASE NOTE: The exterior and interior combinations for solid color paint shown in the chart below have been established as the combinations that would be attractive to the average customer. Orders for non-recommended solid color exterior and interior trim combinations on the Coupe model may be submitted, provided the dealer initials the appropriate order form block as verification that the requested combination is definitely desired.

This procedure does not apply to the Convertible model as combinations shown are the only combinations that have been approved.

				INTERIOR TRIM									
	Type of Seat		Type of Black (		Blue (Midnight)	Neutral (Light)	Red (Dark)	Saddle (Medium)		Silver			
				Custom Interior	Vinyl	Vinyl	Vinyl	Vinyl	Custom Interior	Vinyl	Custom		
Coupe or Convertible	Bud	cket	VBB2	XBB2	VDD2	VNN2	VHH2	VSS2	XSS2	VYY2	XYY2		
EXTERIOR COLOR PAINT	COLOR	CODE			<del></del>	<u>.                                    </u>	<u> </u>		<u> </u>	<u> </u>	1		
SOLID	Lower	Upper											
Blue, Corvette Medium (Metallic)	22	22		X	X	_					X		
Brown, Dark (Metallic)	68	68	7	X	-	Х			X		X		
Gray, Corvette (Metallic)	17	17	7	X	Х	Х	X		x		X		
Green, Dark (Metallic)	48	48		X		Х			X	1	x		
Orange, Corvette (Metallic)	80	80		X		X			X		X		
Red, Mille Miglia	76	76		X		Х	X		Х		X		
Red, Medium (Metallic)	74	74		X		Х	Х		X		X		
Silver Mist, Corvette	14	14		X	х		Х		X		X		
White, Classic	10	10		X	х	Х	Х		X		X		
Yellow, Bright Corvette	56	56		<u>x</u>		X	· · · · · ·	-	X		X		

**REVISED: 8-17-73** 

### **CORVETTE POWER TEAMS**

### Engine, Transmission and Positraction Rear Axle Combinations

(Engine housepower ratings are reflected at "not" horsepower)

EN	IGINE	TRANSMISSION	POSITRACTION REAR AXLE RATIOS							
			With	out Air Conditioning	With Air Conditioni			ning		
Option Number	Description	Type (Std or Optional)		Optional		Optional V				
		(312 01 0)	Std	Econ Peri Spec	Std 🗸	Econ	Perf	Sp		
\		STANDARD ENG	INIE			·	<del></del>			

### STANDARD ENGINE

Standard Eight- Cylinder Engine	Eight- 8-Cylinder ylinder 350-cu-in displacement	4-Speed Wide Range (Std) —M20	3.36	3.08	_	_	3.36	3.08	 	
Ordering Code L48	Hydraulic valve lifters 8.5:1 compression satio Dual exhaust	Turbe Hydra-maticM40	3.08	-	3.36	_	3.08	_	3.36	_

### **OPTIONAL ENGINES**

L82 350-4/DE 350-cu-in 4-barrei 6 Hydrauli 9.0:1 con	Turbo-Fire Special 350-4/DE 8-Cylinder 350-curin displacement 4-barrel carburetor Hydraulic valve lifters	4-Speed Wide-Range (Std) —M20	3.55	-	3.70	_	3.55	_		_
		4-Speed Close-Ratio M21 Without Off Road Package	3.70	3.55	_		3.55	-	_	_
	9.0:1 compression ratio Dual exhaust	With Off Road Package	4.11	3.70		3.36 3.55	4.11	370		3.3 3.5
		Turbe Hydra-matic-M40	3.55	-	3.70	_	3.55	-	-	_
■ Option LS4	Turbe-Jet 4544/DE 8-Cylinder 454-cu-in displacement 4-barrel carburetor Hydraulic valve litters 8.25:1 compression ratio Dual exhaust	4-Speed Wide-Hange (Std) —M20	3.08	-	3.36	_	3.08	_	_	_
		4-Speed Close-Ratio - M21 Without Off Road Package	3.36	3.08	3.55	_	3.36	_	_	_
		With Off Road Package	3.55	3.36	_	3.08	3.55	3.36	_	3.0
		Turbe Hydra-matic-M40	3.08		3.36		3.08	-	_	T-

Available for registration in the State of California when California Emission Equipment is ordered.


**REVISED: 8-17-73** 

DEALER ORDER GUIDE

√ Indicates Change

CORVETTE

 Page 3



## 1974 Corvette

Standard Equipment		Page No.
	1YZ37—V8	
Corvette Convertible	1 <b>YZ</b> 67—V8	4, 5
	····	
Major Features		8
Power Teams		9
Selected Options		10
Specifications	• • • • • • • • • • • • • • • • • • • •	11
Color and Trim		12

### **Corvette Features**

- ☐ Resilient body-color front bumper cover
- ∃ Black-finished precision-cast grille and clear lens parking lights
- ☐ Retractable headlights
- Bright front and rear license plate frames
- Bright windshield molding
- ☐ Air induction hood
- Hide-A-Way windshield wipers with integral washers in wiper arms
- □ Functional front fender air vents
- Bright roof drip molding on Coupe
- ☐ Manually operated folding top on Convertible
- ☐ Body sill molding
- Bright wheel trim rings and center caps
- ☐ Fixed rear window and removable roof panels on Coupe
- ☐ Twin-unit taillights and back-up lights with bright bezels
- ☐ Resilient body-colored urethane rear bumper cover and recessed taillights
- □ Tapered high-back bucket seats with integral head restraints
- ☐ Luxurious all-vinyl interior (Custom interior with genuine leather seat panels available at extra cost)
- ☐ Special sport-style steering wheel
- ☐ Convenient stowage pockets in instrument panel
- □ Wide-view day/night inside rearview mirror
- ☐ Aircraft-type center console
- ☐ Rally-type electric clock
- □ Ammeter, temperature, fuel and oil pressure gauges
- □ Coolant recovery system
- □ 7,000-rpm tachometer
- ☐ Separate trip odometer
- ☐ Seat belt and door ajar warning lights
- ☐ Console-mounted parking brake control
- ☐ Custom Deluxe color-keyed seat belt (and shoulder belts on Coupe)
- ☐ Molded door panels with built-in armrests
- ☐ Color-keyed deep-twist carpeting
- ☐ Dual courtesy lights with automatic door switches
- Carpeted rear compartment stowage wells
- ☐ Concealed convertible top stowage on Convertible


Appearance features available include: Custom Interior (genuine leather seat panels; plush cut-pile carpeting; special door trim with carpeted lower panels; wood-grain vinyl accents on doors and center console); white stripe tires; white lettered tires.








# **Corvette Coupe**

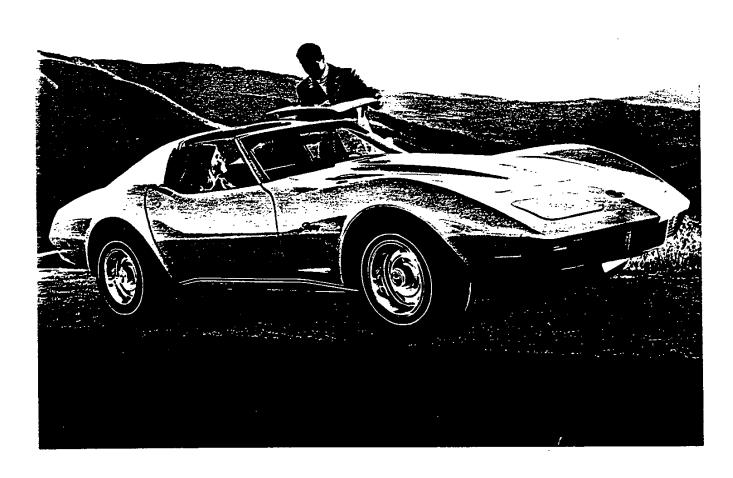

# **Corvette Convertible**




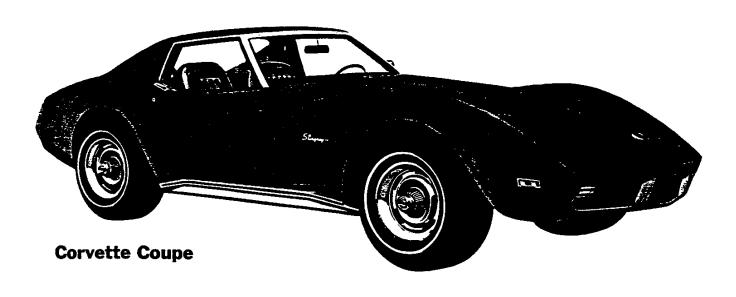



### **Corvette Custom Interior**

Available at extra cost. Includes: genuine leather seat panels; plush cut-pile carpeting; special door trim with carpeted lower panels; rich wood-grain vinyl on doors and center console.

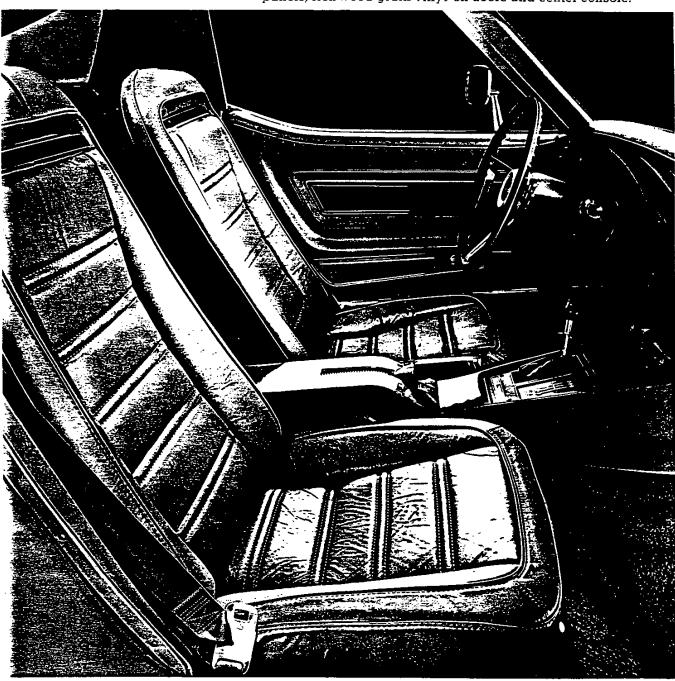

## **Corvette Standard Interior**



Major Features-Sta	andard on 1974 Cor	vettes
Resilient body-colored urethane rear bumper cover and recessed taillights Power-operated retractable dual headlights High-rise fenders with functional air vents Tinted glass in all windows Recessed outside door handles Full door-glass styling Wheel trim rings and center caps Flow-through ventilation system Tapered high-back bucket seats with integral head restraints Special sport-styled steering wheel Tachometer, ammeter, oil pressure, fuel and temperature gauges Separate trip odometer	<ul> <li>□ Warning lights for seat belt and door ajar</li> <li>□ Console-mounted parking brake control</li> <li>□ Deep twist floor carpeting</li> <li>□ All-vinyl interior trim</li> <li>□ Sequential front seat belt and ignition interlock system</li> <li>□ Rear compartment stowage wells</li> <li>□ Evaporation control system</li> <li>□ Full dual exhaust system</li> <li>□ 4-Speed fully synchronized transmission</li> <li>□ Positraction rear axle</li> <li>□ Delcotron generator</li> <li>□ Sealed side-terminal battery</li> <li>□ Positive-shift starter</li> <li>□ Automatic choke</li> <li>□ Built-in blended-air heater and defroster system</li> </ul>	<ul> <li>□ Side-Guard door beams</li> <li>□ Curved side windows</li> <li>□ Dual-speed electric windshield wipers</li> <li>□ Front lower air spoiler</li> <li>□ Separate spare tire stowage with key lock</li> <li>□ Steel-reinforced fiberglass body</li> <li>□ Built-in anti-theft audio alarm system</li> <li>□ Magic-Mirror acrylic lacquer finish</li> <li>□ Full independent suspension system</li> <li>□ Self-adjusting disc brakes at all four wheels</li> <li>□ GR70-15B steel-belted radial ply blackwall tires</li> <li>□ Wide 15" x 8" wheels</li> </ul>
Safety and Security		
Occupant Protection Features  Two front combination seat and shoulder belts (except Convertible) with pushbutton buckles for driver and passenger (with reminder light and buzzer, inertia reel and starter interlock)  Two built-in front seat head	□ Soft, low-profile window control knobs □ Pressure lock radiator cap □ High-strength seat anchorages and construction □ Stamped steel door hinges  Accident Prevention Features	<ul> <li>□ Low-glare instrument panel top, inside windshield moldings, wipe arms and blades, and steering wheel metallic surfaces</li> <li>□ Safety wheel rims</li> <li>□ Uniform shift quadrant</li> <li>□ No winged wheel nuts, discs and caps</li> </ul>

- Side marker lights and reflectors (front side marker lights flash with directional signal)
- ☐ Parking lights that illuminate with headlights
- ☐ Four-way hazard warning flasher □ Back-up lights
- □ Lane-change feature in direction signal control
- ☐ Windshield defrosters, washer and dual-speed wipers
- ☐ Wide-view inside day-night mirror (vinyl-edged, shatter-resistant glass and deflecting support)
- ☐ Outside rearview mirror
- □ Dual master cylinder brake system with warning light
- ☐ Starter safety switch
- □ Improved bumper systems
- Headlight aiming access provision

- per
- ad
- □ Self-adjusting brakes
- ☐ Illumination of windshield wiper and washer, heater and defroster controls
- ☐ Flame-arresting battery vent caps
- ☐ Flame-retardant interior materials

#### **Anti-Theft Features**

- ☐ Anti-theft ignition key warning buzzer
- ☐ Anti-theft steering column lock
- ☐ Inside hood latch release
- ☐ Anti-theft key system (one key for ignition only, one key for console and doors, one key for audio alarm system)
- $\square$  Visible vehicle identification
- ☐ Tamper-resistant odometer

security

restraints

Energy-absorbing steering column

☐ Passenger-guard door locks

☐ Folding seat back latches

□ Energy-absorbing padded

☐ Thick-laminate windshield

instrument panel

☐ Padded sun visors

☐ Safety armrests

(except Convertible)

☐ Safety steering wheel

☐ Fuel tank impact security

☐ Console door latch impact

□ Smooth-contoured door and

window regulator handles

☐ Side-Guard beams

☐ Safety door latches and hinges

☐ Contoured windshield header

# **Corvette Standard Interior**



# Major Features-Standard on 1974 Corvettes

☐ Resilient body-colored urethane □ Warning lights for seat belt and ☐ Side-Guard door beams ☐ Curved side windows rear bumper cover and recessed door ajar ☐ Console-mounted parking brake □ Dual-speed electric windshield taillights control ☐ Power-operated retractable dual wipers Deep twist floor carpeting ☐ Front lower air spoiler headlights ☐ High-rise fenders with functional ☐ All-vinvl interior trim ☐ Separate spare tire stowage with ☐ Sequential front seat belt and air vents kev lock □ Steel-reinforced fiberglass body Tinted glass in all windows ignition interlock system Recessed outside door handles ☐ Rear compartment stowage wells ☐ Built-in anti-theft audio alarm □ Full door-glass styling ☐ Evaporation control system □ Wheel trim rings and center caps □ Full dual exhaust system ☐ Magic-Mirror acrylic lacquer ☐ Flow-through ventilation system □ 4-Speed fully synchronized ☐ Full independent suspension ☐ Tapered high-back bucket seats transmission with integral head restraints □ Positraction rear axle Special sport-styled steering wheel ☐ Delcotron generator ☐ Self-adjusting disc brakes at all Sealed side-terminal battery □ Tachometer, ammeter, oil four wheels ☐ Positive-shift starter pressure, fuel and temperature ☐ GR70-15B steel-belted radial ply □ Automatic choke blackwall tires □ Built-in blended-air heater and □ Wide 15" x 8" wheels ☐ Separate trip odometer defroster system

# Safety and Security Features

#### Occupant Protection Features

- ☐ Two front combination seat and shoulder belts (except Convertible) with pushbutton buckles for driver and passenger (with reminder light and buzzer, inertia reel and starter interlock)
- ☐ Two built-in front seat head restraints
- ☐ Energy-absorbing steering column
- □ Passenger-guard door locks
- ☐ Safety door latches and hinges
- □ Folding seat back latches
- ☐ Energy-absorbing padded instrument panel
- □ Contoured windshield header (except Convertible)
- ☐ Thick-laminate windshield
- ☐ Padded sun visors
- □ Safety armrests
- ☐ Safety steering wheel
- ☐ Side-Guard beams
- ☐ Fuel tank impact security
- ☐ Console door latch impact security
- ☐ Smooth-contoured door and window regulator handles

- ☐ Soft, low-profile window control knobs
- Pressure lock radiator cap
- ☐ High-strength seat anchorages and construction
- ☐ Stamped steel door hinges

#### **Accident Prevention Features**

- Side marker lights and reflectors (front side marker lights flash with directional signal)
- Parking lights that illuminate with headlights
- ☐ Four-way hazard warning flasher
- □ Back-up lights
- ☐ Lane-change feature in direction signal control
- ☐ Windshield defrosters, washer and dual-speed wipers
- ☐ Wide-view inside day-night mirror (vinyl-edged, shatter-resistant glass and deflecting support)
- ☐ Outside rearview mirror
- ☐ Dual master cylinder brake system with warning light
- ☐ Starter safety switch
- ☐ Improved bumper systems
- ☐ Headlight aiming access provision

- Low-glare instrument panel top, inside windshield moldings, wiper arms and blades, and steering wheel metallic surfaces
- ☐ Safety wheel rims
- ☐ Uniform shift quadrant
- ☐ No winged wheel nuts, discs and caps
- □ Self-adjusting brakes
- Illumination of windshield wiper and washer, heater and defroster controls
- ☐ Flame-arresting battery vent caps
- ☐ Flame-retardant interior materials

#### Anti-Theft Features

- ☐ Anti-theft ignition key warning buzzer
- ☐ Anti-theft steering column lock
- ☐ Inside hood latch release
- □ Anti-theft key system (one key for ignition only, one key for console and doors, one key for audio alarm system)
- ☐ Visible vehicle identification
- ☐ Tamper-resistant odometer

Manufacturer	Car Line		
Chevrolet Motor Division Ceneral Motors Corporation	CORVETTE		
Mailing Address	Model Year	Issued:	
Chevrolet Engineering Center		September, 1973	
30003 Van Dyke		Revised (•)	
Warren, Michigan 48090	1974		

The information contained herein is prepared, distributed by land is solely the responsibility of the automobile manufacturing company to whose products it relates. Questions concerning these specifications should be directed to the manufacturing companies under the ausoices of the Motor Vehicle Manufacturer Association.

#### **Table Of Contents**

•	1 (	Car Models
2, 3	3 (	Car and Body Dimensions
4	<b>1</b> F	Power Teams
5—9	9 1	Engine
5	9 6	Exhaust System
10	) [	Fuel System
11	(	Cooling System
12, 13	3 \	/ehicle Emission Control
1416	5 i	Electrical
17—19	) (	Orive Units
20	) .	Tires and Wheels
20, 21	l 8	3rakes
22	2 9	Steering
23	3 5	Suspension — Front and Rear
24	1 1	Frame
24		Body — Miscellaneous Information
25	5 (	Convenience Equipment
25	5 I	amp Height and Spacing
26	5 <b>'</b>	Vehicle Weights
27	7 (	Optional Equipment Weights
29, 30, 31	1 (	Car and Body Dimension Key Sheets
32	2	ndex

- NOTES:
  1. The General Specifications herein are those in effect at date of compilation and are subject to change without notice by the manufacturer.
  2. UNLESS OTHERWISE INDICATED:
- - a. Specifications apply to standard models without optional equipment. Significant deviations are noted.
     b. Nominal design dimensions are used throughout these specifications.

  - c. All dimensions are in inches.

Car And Body Dimensions See Pages 29 - 31 for SAE Dimension Definitions

			Body Type	
	SAE	Sport	Conve	ertible
	Ref. No.	Coupe	Soft Top	Hard Top
	L	Coupo	3011 1 3 5	
Front Compartment				
H Point to body "O" line	L31		44. 7	
Effective head room	H61	36, 2	37.1	36.0
Max. eff. leg room - accelerator	L34		42.1	
H Point to Heel point	H30		6. 4	
H Point travel	L17		4.5	
Shoulder room	W3		47.9	
Hip room	W5		48.8	
Upper body opening to ground	H50		<b>4</b> 3. 6	
Rear Compartment				
H Point couple distance	L50		<del></del>	· · · · · · · · · · · · · · · · · · ·
Effective head room	H63		<i>r</i> .	····
Min. effective leg room	L51			·• · · · · · · · · · · · · · · · · · ·
H Point to Heel point	H31		*	· · · · · · · · · · · · · · · · · · ·
Min. knee room	L48	·		
Rear Compartment room	L3		<u> </u>	
Shoulder room	W4		K X	
Hoor room	W6	<del>→</del>	Q.	
Upper body opening to ground	H51		₹	
Luggage Compartment Usable luggage capacity (cu. ft.)	nt V1		6.5	
Liftover height	H195	<del></del> _		
Position of spare tire storage			In well under body a	t rear
Method of holding fid open				
Station Wagon — This	rd Seat		\$	
Shoulder Room	W85		<b>~</b>	. <u>.</u>
Hip room	W86		<u> </u>	
Effective leg room	L86		0' 5	
Effective head room	H86		÷ °	
Seat facing direction			Q Y	
Station Wagon — Car	go Spac	e	<b>F</b>	
Cargo length at floor - front seat	L202		*	
Cargo length at belt - front seat	L204			<u></u>
Cargo width - Wheelhouse	W201		<u>~</u>	
Opening width at belt	W204			
Maximum cargo height	H201		<u> </u>	
Rear opening height	H202		₹ 4	
Cargo volume index (cu. ft ) <u>W4 x L204 x H201</u> 1728	V2			

 Car Line
 CORVETTE

 Model Year
 1974
 Issued
 9-73
 Revised (•)
 1/74

#### Power Teams (Indicate whether standard or optional)

SAE Net bnp (brake horsepower) and net torque corrected to 85° F and 29.38 in. Hg atmospheric pressure.

SERIES	ENGINE			TRANSMISSION	AXLE RATIO (Std. first)				
AVAILABILITY	Displ.	Carb.	Compr. Ratio	SAE Net BHP	@ RPM	THAIRMISSION	'A'	ndicate A/C ra	itio)
(Standard)	Turbo- Fire 350 V8 (L48)		8.5:1	195 @ 4400	275 @	4-Spd. manual (2, 64:1 low) 3-Spd. automatic	3. 36	3. 08	3.36/3.00
• 1YZ37	Turbo- Fire 350 V8 (L82)		9. 0:1	250 @ 5200	@	4-Spd. manual (2.64:11ow) 4-Spd. manual (2.43:11ow) 3-Spd. automatic	3. 55 3. 70 3. 55	3. 70 3. 55(a) 3. 70	3. 55 3. 55 3. 55
1YZ67 (Optional) (all states)	Turbo- Jet 454 V8 (LS4)	One; 4-bbl	8. 25:1	270 @ 4400	380 @ 2800	4-Spd. manual * (2.43:1low) 3-Spd.automatic*		3. 08b)	3. 3.6 3. 08
* - Optional  * - Positraction (a) 3.70 added w (b) With RPO Z0 A- Standard B- Optional C- Air Condition	th RP 7, 3.5	O Z07	(off t	ne road	pack	age) 4.11, 3.55 (	¥ 3.36	optional	

<b>MVMA</b>	Spe	cifications	Form
Passer	nger	Car	

Car Line	CORVI	CTTE		
Model Year	1974	issued	9-73	Revised (•)

-	Engine Displacement			
	V8-350 and V8-454			
Drive Units—Clutch (Manu	al Transmission)			
Make & type	Chevrolet, single dry-disc semi-centrifugal			
Type pressure plate springs	Circular plate diaphragm, bent finger design			
Total spring load (lb.)	2450-2750			

		Seliti-Centringer			
Type pressure plate springs		Circular plate diaphragm, bent finger design			
Total sprin	ng load (lb.)	2450-2750			
No. of clut	ch driven discs	One			
	Material	Woven type asbestos			
	Outside & inside dia.	11, 00x6, 50			
	Total eff. area (sq. in.)	123, 70			
Clutch facing	Thickness	.140			
•	Engagement cushion- ing method	Flat spring steel between friction rings			
Re ease	Type & method of lubrication	Single row ball, packed and sealed			
Torsional damping	Methods springs. friction material	Coil springs			

#### **Drive Units—Transmissions**

Manual 3-speed (std., opt., N.A.)	Not available
Manual 4-speed (std., opt . N.A.)	Standard
Automatic (std. opt., N.A.)	Optional

#### Drive Units — Manual Trans.

Number or I	forward speeds	4-Speed (a)	4-Speed (b)
Transmis- sion ratios In t	In first	2, 52:1	2, 20:1
	In second	1, 88:1	1. 64:1
	In third	1, 46:1	1, 27:1
	In fourth	1. 00:1	1, 00:1
	In reverse	2, 59:1	2, 26:1
Synchronou	is meshing, specify gears		ward gears

Shift lever location

		Floor mounted with console
Capacity (pt.)		3
Type reco	ommended	Meeting Military Specs. MIL-L-2105B
SAF	Summer	ŠAĒ 80
COSITY	Winter	SAE 80
nomber	Extreme cold	SAE 80
	SAE vis-	Type recommended  SAE vis- cosity Winter

- (a) Available all engine combinations
- (b) Available all engine combinations except V8-350 (Std.)

MVMA	Spe	cifications	<b>Form</b>
Passer	nger	Car	

Car Line	CORVI	CTTE		
Model Year	1974	issued	9-73	Revised (•)

;	Engine Displacement
	V8-350 & 454 C.I.

#### **Drive Units—Automatic Transmission**

Trade nam	Turbo Hydra-matic		
Type (describe)		3-Speed Torque Converter	
Selector to	cation	Lever (floor mounted)	
	Р	Park	
	R	2,08	
Gear	N	Neutral	
Ratios	D	2. 48-1. 48-1. 00	
	L2	2. 48-1. 48	
	L1	2. 48	
Max upsh	t speed - drive range		
Лах к эко	own speed - drive range		
	Number of elements	3	
orque	Max ratio at stall	2, 10	
convertor	Type of cooling (air, liquid)	Water	
	Nominal diameter	12, 20	
ubricant	Capacity - refill (pt.)	8	
Lubricati	Type recommended	A suffix A	
Special tra	nsmission		

#### Drive Units—Axle

Type (front	. rear)		Rear	
Description			Overhung pinion gear	
Limited Sli	p differentia	il. type	Disc clutches	
Drive Pinio	n Offset		1. 50	
No. of diffe	rential pinio	ons	Two	
Pinion adjustment (shim, other)		m. other)	None	
Pinion bearing adj. (shim. other)		nim. other)	Shim	
Wheel bea	ring type		Taper roller	
	Capacity	(pt.)	4	
Type recommended		ommended	Meeting Military Specs MIL-L-2105B	
Lubricant	SAE vis-	Summer .	SAE 80	
	cosity	Winter	SAE 80	
	บกเมอธน	Extreme cold	SAE 80	

## Axle Ratio Tooth Combinations (See page 4 for axle ratio usage)

Axle ratio		3. 08	3. 36	3. 55	3. 70
No of	Pinion	12	11	9	10
No. of teeth	Ring gear	37	37	32	37
Ring Gear			8. 3	75	

Car Line	CORVE	TTE			<del></del>
Model Year	1974	Issued	9-73	Revised (•)	

Engine Displacement V8-350 C.I. V8-454 C. I. L48 L82 LS4 Engine — Cooling System Type system (pressure, pressure vented. atmospheric, other) Pressure-vented thru coolant recovery system Radiator cap relief valve pressure 15± 1 PSI Circuta-Type (choke, bypass) Choke tion thermostat Starts to open at 192°-198° 192° -198° 177° -183° Type (centrifugal, other) Centrifugal GPM 2000 pump rpm 22. 7 25.8 Water Number of pumps One Drive (V-belt, other) V-belt Bearing type Permanently lubricated double row ball By-pass recirculation type (inter., ext.) <u>Internal</u> External Radiator core type (cross-flow. Tube and center vertical, cellular, tube and fin, other) Copper-brass crossflow With heater (qt.) 19 18 24 Cooring Without heater (qt.) System Opt equipment-specify (qt) 19 18 24 Water jackets full length of cyl. (yes, no) Yes Water all around cylinder (yes. no) Yes Number and type (molded, straight) 1. 75 1.88 Lower Inside diameter One, molded Number and type (molded, straight) 1.50 Radiator Jones Inside diameter One, molded Number and type (molded, straight) None One. molded By-pass Inside diameter 725-. 765 None Number of blades & spacing 5-staggered Diameter Ratio-lan to crankshalt rev Fan 1.15:1 1. 23:1 Fan cutout type Thermo-modulated viscous-clutch Bearing type Double row ball Fan AB AB FG Generator or alternator F Α \*Drive Water Pump AB belts (indicate ABFG Power Steering C С C belt used by letter) Air Conditioning D D H Air Injection E(\*) E I (\*) \* Used with engine/manual trans-all states and engine/auto trans-California "Drive Bein Dimensions ĸ Angle of v 38°-42° Nominal engin (SAE) 52<u>. 75 32. 46 43. 50 59. 00 32. 46 54. 00 31. 86 45. 50 30. 50</u> Width . 080

Car Line	CORVET	Œ.	
Model Year	1974 iss	ued 9-73	Revised (•)

			Engine Displacement				
			V8-350 L48 mm'l trans	V8-350 L48 &350 L82	V8-350 L48 auto trn		
			V8-350 L82&V8 454	V8-454			
			All States	California only	All States		
Vehicle	Emission	Control	except California		except California		
	Type (Air injection, engine modifications, other)		Air Tr	ijection	Engine modificatio		
	<u> </u>	Type			l Ingine incurre		
ŀ		Displacement	Semi-articulated vane type 19.3 cubic inch		1		
	Air Injection Pump	Drive ratio			Controlled		
		Drive type		.25:1 aft pulley	Controlled		
•	натр	Relief valve (type)	Diverte		Combustion		
		Filter (describe)	<del></del>				
}			Centrituga	l air cleaner			
į		Air distribution (head, manifold, etc.)	Ma	nifold	System		
!	Air	Point of entry	Fyhar	ust ports			
	Injection System	injection tube i.d.		700			
,	,	Check valve type		ure plate type			
		Backfire protection (type)	· <del>·</del> ···	ter valve			
Ì		Type (controlled flow.	DIVEI	LEI VAIVE	<del></del>		
	ļ	open orifice, other)	Controlled flow				
Exhaust		Valve type	Vacuum modulated shut-off and meter		ering valve		
Emission Control		Valve location	V8-350 right rear and V8-454 left front of man		ont of manifold		
Control	Exhaust	Control energy source	Carburetor vacuum				
	Gas Recirculation	Exhaust source	Manifold exhaust crossover		ossover		
	System	Exhaust cooler type		None			
		Orifice no. and size		One; .030			
		Point of exhaust injection	-				
		(spacer), carburetor.					
		manifold, other)		Inlet manifol	ld		
i		Carburetor	Thermostatically of	controlled air clea	ner regulates		
		Heated Air	and mixes heated	air with incoming	cold air to		
	!		reduce hydrocarbo	on			
	<b>-</b>	Transmission	Regulates vacuum	to distributor vac	uum advance to		
	Other	Controlled spar	k reduce hydrocarbo	n and oxides of ni	trogen emissions		
		(with manual	in low and interme	diate speed range	8		
		transmission	)		·		
					<del></del>		
	Type (ventilat			Induction sys	stem		
!	induction syst	em, other) Optional			/ <u> </u>		
		Make and model		AC Spark Plug -			
		Location		Rocker cover - 1	leit iront		
_	Control Unit	Energy source (manifold		36			
Crankcase i Emission	Ona	vacuum, carburetor, other)	· · · · · · · · · · · · · · · · · · ·	Manifold v	acuum		
Contra		Control method (variable orifice, fixed orifice, other)		Variable o	rifice		
		Discharges (to intake		·			
		manifold, other)		Intake man	ifold		
	Complete System	Air inlet (breather cap, other	)	Carburetor	air cleaner		
į	-,	Flame arrestor (screen, other		Screen			

Manufacturer Chevrolet Motor Division General Motors Corporation	Car Line	Car Line		
Mailing Address Chevrolet Engineering Center	Model Year	Issued: September, 1973		
30003 Van Dyke	1074	Revised (•)		
Warren, Michigan 48090	1974	March. 1974		

The information contained herein is prepared, distributed by, and is solely the responsibility of the automobile manufacturing company to whose products it relates. Questions concerning these specifications should be directed to the manufacturer whose address is shown above. This specification form was developed by automobile manufacturing companies under the auspices of the Motor Vehicle Manufacturers Association.

#### **Table Of Contents**

	1	Car Models
2,	3	Car and Body Dimensions
	4	Power Teams
5	9	Engine
	9	Exhaust System
1	0	Fuel System
1	1	Cooling System
12, 1	3	Vehicle Emission Control
141	6	Electrical
171	9	Drive Units
2	0	Tires and Wheels
20, 2	1	Brakes
2	2	Steering
2	3	Suspension — Front and Rear
2	4	Frame
2	4	Body — Miscellaneous Information
2	:5	Convenience Equipment
2	5	Lamp Height and Spacing
2	6	Vehicle Weights
2	7	Optional Equipment Weights
29, 30, 3	1	Car and Body Dimension Key Sheets
3	2	Index

- The General Specifications herein are those in effect at date of compilation and are subject to change without notice by the manufacturer.
   UNLESS OTHERWISE INDICATED:
- - Specifications apply to standard models without optional equipment. Significant deviations are noted.
     Nominal design dimensions are used throughout these specifications.
     All dimensions are in inches.

Car Line	CORVETTE	
Model Year	1974 Issued 9-	73 Revised (•)

Max. Number of Passengers

#### Car Modeis

Make, Car line, Series, Body Type.

L	Model Description	(Mtgr's Model Code)	(Front/Rear)	
		Model		
	CORVETTE	Numbers	Front	
	2-Door Sport Coupe	1YZ37	2	
1	2-Door Convertible	1 <b>YZ</b> 67	2	

NOTE: ANY SPECIFICATIONS ON THE FOLLOWING PAGES THAT
ARE SPECIFIC TO CALIFORNIA REQUIREMENTS ARE

INDICATED ACCORDINGLY

Carline	CORVE	TE			
Model Year			9-73	Revised (•)	3/74

Car and Body Dimensions See Pages 29 - 31 for SAE Dimension Definitions

All dimensions to ground are for comparative curosses only. Dimensions are to be shown for: 4-Dr. Sedan, 2-Dr. H.T., 4-Dr. H.T., Convertible and Station Wagon.

			Body Type	
	SAE	Sport	Conve	ertible
	Ref.   No.	Coupe	Soft Top	Hard Top
l	<u> </u>			
Width				
Tread - Front	W101		58. 7	
Tread - Rear	W102		59.5	
Maximum overall car width	W103		69.0	
Body width at No. 2 pillar	W117		66. 2	
Max. front doors open	W120 !	<u> </u>	136. 5	
Max. rear doors open	W121			
Length				
Body "O" to front of dash	L 30		-1. 7	
Wheelbase	L101		98. 0	
Overall car length	L103	<del></del>	185. 5	
Overhang - front	L104		42.8	
Overhang - rear	L105		44. 7	
Body upper structure length	L123	57. 2	59.8	61. 3
Body "O" line to C.E. of rear wheel	L127		72. 0	
Body "O" line to wis cowl point	L130		16. 5	
Height Passenger D-stribution (front & rear)	+		2-0	
Trunk Cargo load (lbs.)	*		0	
Overall height	H101	47.7		7.8
Cowl height	H114		36. 3	
Deck neight	H138			
Rocker To ground			7. 5	
panel - From front wheel C/L	H112			
Bottom of front door to ground	H133		9, 9	
Rocker To ground			9. 9 7. 5	
panel - rear From rear wheel C/L	H111			
Bottom of rear door to ground	Н135			
Windshield slope angle	н122		57. 0	
				-
Ground Clearance	T	·····	12.3	
Bumper to ground - front	H102		12. 2	
Bumper to ground - rear	H104	<del> </del>	11. 7	
Angle of approach	H106		17°4'	
Angle of departure	H107		17°54'	
Ramp breakover angle	H147		13°20'	
Rear axle differential to ground	H153		6. 2	<del></del>
Min. running clearance (Specify)	H156		4. 2 (a)	

<sup>\*</sup>All measurements are made at the stated passenger and trunk/cargo loadings

(a) Exhaust pipe at X-member.

Manufacturer	Car Line	
Chevrolet Motor Division General Motors Corporation	со	RVETTE
Mailing Address	Model Year	Issued:
Chevrolet Engineering Center		September, 1973
30003 Van Dyke		Revised (•)
Warren, Michigan 48090	1974	January, 1974

The information contained herein is prepared, distributed by, and is solely the responsibility of the automobile manufacturing company to whose products it relates. Questions concerning these specifications should be directed to the manufacturer whose address is shown above. This specification form was developed by automobile manufacturing companies under the auspices of the Motor Vehicle Manufacturers Association.

MVMA-40A-74

#### **Table Of Contents**

1	Car Models
2, 3	Car and Body Dimensions
4	Power Teams
5—9	Engine
9	Exhaust System
10	Fuel System
11	Cooling System
12, 13	Vehicle Emission Control
14-16	Electrical
1719	Drive Units
20	Tires and Wheels
20, 21	Brakes
22	Steering
23	Suspension — Front and Rear
24	Frame
24	Body — Miscellaneous Information
25	Convenience Equipment
25	Lamp Height and Spacing
26	Vehicle Weights
27	Optional Equipment Weights
29, 30, 31	Car and Body Dimension Key Sheets
32	Index

NOTES.

1. The General Specifications herein are those in effect at date of compilation and are subject to change without notice by the manufacturer.

2. UNLESS OTHERWISE INDICATED:

a. Specifications apply to standard models without optional equipment. Significant deviations are noted.

b. Nominal design dimensions are used throughout these specifications.

c. All dimensions are in inches.

Car Line	CORVETT	<u>E</u>			
Model Year	1974	Issued	9-73	Revised (•) _	

#### Car Models

Model Description	Make, Car line, Series, Body Type (Mtgr's Model Code)	Max. Number of Passengers (Front/Rear)
CORVETTE	Model <u>Numbers</u>	Front
2-Door Sport Coupe 2-Door Convertible	1YZ37 1YZ67	2 2

NOTE: ANY SPECIFICATIONS ON THE FOLLOWING PAGES THAT ARE SPECIFIC TO CALIFORNIA REQUIREMENTS ARE INDICATED ACCORDINGLY

Car Line CORVETTE

Model Year 1974 Issued 9-73 Revised (•)

Car and Body Dimensions See Pages 29 - 31 for SAE Dimension Definitions

All dimensions to ground are for comparative purposes only. Dimensions are to be shown for: 4-Dr. Sedan, 2-Dr. H.T., 4-Dr. H.T., Convertible and Station Wagon.

		Body Type					
	SAE Ref.	Sport	Conve	ertible			
	No.	Coupe	Soft Top	Hard Top			
Width							
Tread - Front	W101		58. 7				
Tread - Rear	W102		59.5	•			
Maximum overall car width	W103		69.0				
Body width at No. 2 pillar	W117		66. 2				
Max. front doors open	W120		136.5				
Max. rear goors open	W121						
Length							
Body "O" to front of dash	L 30		-1. 7				
Wheelbase	L101		98.0				
Overail car length	L103		185. 5				
Overnang - Front	L104		42.8				
Overnang - rear	L105		44. 7				
Borty apper structure length	L123	57. 2	59.8	61. 3			
uy 'O" line to C L of rear wheel	L127		72, 0				
Gody 'O" line to wis cowl point	L130		16. 5				
Height Passenger Distribution (front & rear)	*		2-0				
Trunk/Cargo load (lbs.)	*						
Overall height	H101	47. 7		7. 8			
Cowl height	H114		36. 3				
Deck height	H138			·			
Rocker To ground	н112		7, 5				
front From front wheel C/L		<del></del>		···			
Bottom of front door to ground	H133		9, 9 7, 5	<del>,</del>			
Rocker To ground	Н111 —		7, 5	<del></del>			
rear From rear wheel C/L			······································				
Bottom of rear door to ground	H135						
Windshield slope angle	H122		57.0				
Ground Clearance							
Bumper to ground - front	H102		12. 2				
Bumper to ground - rear	H104		11. 7				
Angle of approach	H106		17°4'				
Angle of departure	H107		17° 54'				
Ramp breakover angle	H147		13°20'				
Rear axie differential to ground	H153		6. 2	<u> </u>			
Min_running clearance (Specify)	H156		4. 2 (a)				

<sup>\*</sup>All measurements are made at the stated passenger and trunk/cargo loadings

<sup>(</sup>a) Exhaust pipe at X-member.

 Car Line
 CORVETTE

 Model Year
 1974
 Issued
 9-73
 Revised (●)

Car And Body Dimensions See Pages 29 - 31 for SAE Dimension Definitions

	<del></del>		Body Type	
	SAE Ref.	Sport	Conv	ertible
	No.	Coupe	Soft Top	Hard Top
Front Compartment				
H Point to body "O" line	L31		44. 7	
Effective head room	H61	36. 2	37.1	26.0
Max eff leg room - accelerator	L34		42.1	36. 0
H Point to Hee! point	H30		6.4	
H Point travel	L17	<del></del>	4.5	
Shoulder room	W3	<del></del>		
Hip room	W5	<del></del>	47. 9 48. 8	
Upper body opening to ground	H50		43. 6	
Rear Compartment	L50	<del></del>		
Effective head room	H63	<del></del>	7:	
Min effective leg room	L51	<del></del>		<del></del>
H Point to Heer point	H31	<del></del>	8	<del></del>
Min knee room	L48	<del></del>		
Rear Compartment room	L3	<del></del>	<u> </u>	
Shoulder room:	W4			<del></del>
Hrp room	W6	<del>\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ </del>		
Upper body opening to ground	H51	<del></del>	P	
Luggage Compartme	ent			
Jsable luggage capacity (cu. ft.)	V1		6, 5	
Liftover neight	H195	<del></del>	<u>0.5</u>	
Position of spare tire storage	<del>                                     </del>		In well under body at	7027
Method of nolding lid open				1681
Station Wagon — Thi	rd Seat		<b>€</b>	, <u>, , , , , , , , , , , , , , , , , , </u>
Shoulder Room	W85		8	
Hip room	W86	<del></del>		<del></del>
Effective leg room	L86		<del>\(\frac{\frac}\fint{\frac{\fin}}}}}}}{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac}\fir}}}}{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac{\frac}\f{\frac{\frac{\frac{\fi</del>	
Effective head room	H86		\$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$ \$	
Seat facing direction	<del>                                     </del>			
Station Wagon — Ca	rgo Space		P.	,
Cargo length at floor - front seat	L202		49	
Cargo length at belt - front seat	L204			
Cargo width - Wheelhouse	W201		P	
Opening width at belt	W204		& 30	
Maximum cargo height	H201		0 4	
Rear opening height	H202		₹ 4	<del></del>
Cargo volume index (cu. ft.) <u>W4 x L204 x H201</u> 1728	V2		\$ 44 · · ·	

Car Line	CORV	ΕT	TE			•••
Model Year	1974		Issued	9-73	Revised (•)	

#### Power Teams (Indicate whether standard or optional)

SAE Net blip (brake horsepower) and net torque corrected to 85° F and 29.38 in. Hg atmospheric pressure.

SERIES			ENGINE			TRANSMISSION		AXLE RATIO (Std. first)			
AVAILABILITY	Displ. cu. in.	Carb.	Compr. Ratio	SAE Net BHP	@ RPM Torque		ıД		(Indicate A/C ra	tio)	'C'
lYZ67 (Standard)	Turbo- Fire 350 V8 (L48)	1	8. 5:1	195 @ <b>44</b> 00	@	4-Spd. manual (2.52:1 low) 3-Spd. automatic		36 08			8/3.3
	Turbo- Fire 350 V8	One; 4-bbl	9. 0:1	250 @ 5200	@	4-Spd. manual (2.52:1 low) 4-Spd. manual		55 70			55 55
	(L82)	٠		3200	1000	(2, 20:1 low) 3-Spd. automatic				3. !	
(Optional)	l	One; 4-bbl	8. 25:1	270 @	_	(2. 52:1 low)		08		3. (	
	454 V8 (LS4)			4400	2800	4-Spd. manual * (2.20:1 low) 3-Spd.automatic*	<u> </u>			3.	
* - Optional  - Positraction (a) 3.36 added w (b) With RPO Z0 A- Standard B- Optional C- Air Condition	th RP 7, 3.5	O Z07	(off t	be road	pack	age)					

Car Line

CORVETTE -

Model Year

1974

Iusued 9-73 Revised (•)

114.33

-	Engine Displacement					
	V8-350 C.I.	V8-454 C. I.				
	L48	LS4				
Engine — General		÷				
Type, no cyls., valve arr	90° OHV					
Bore and stroke (nominal)	4.00x3.48	4. 251x4. 00				
Piston displacement, cu. in.	350	454				
Bore spacing (C/L to C/L)	4. 40	4.84				
No. system L. Bank	1-3-5-7					
(front to rear) R. Bank	2-4-6-8					
Firing Order	1-8-4-3-6-5-7-2					
Cylinder Head Material	Cast alloy iron					
Cylinder Block Material	Cast alloy iron					
Cyl Steeve-Wet, dry none	None					
Number of Front	Two					
ntg. points Rear	One					
ngine installation angle	3°					
Taxable Dia 2 x No Cyl						
norsepower 2.5	51. 2	57.8				
Recommended fuel						
egular — premium	Unleaded or low lead					
Cylinder Head Volume (cc)	75. 47	115. 33				
Head Gasket Thickness						
Compressed)	. 021	. 028				
Head Gasket Volume (cc)	4. 58	7, 10				
Deck Clearance nominal	. 026	. 020				
above or below block)	(below)	(below)				
Minimum Combustion						

#### Engine — Pistons

Chamber Volume (cc)

Material			Cast alum. alloy	Alum. impact extruded	Cast alum, alloy	
Description and finish		h	Sump head; Flat head, notched; slipper skirt slipper skirt		Flat head; valve cutout	
Weight (piston only) oz.		OZ.	26. 02	26, 02	25. 94	
	Top	land	. 0235 0325	. 0305 0395	.02700330	
Clearance (limits) Skirt Top Bottom		<b></b>	. 0007 0017 (a)	. 0046 0056 (a)	. 0018 0028 (b)	
No. 1 ring		1 ring	3. 546-3. 556		3. 770-3. 780	
Ring groove diameter	No.	2 ring	3.54	6-3.556	3, 770-3, 780	
	No.	3 ring	3, 58	2-3.592	3, 803-3, 813	

74.47

- (a) Measured 1.56 from top of piston
- (b) Measured 1.65 from top of piston

Car Line

CORVETTE

Model Year 1974

Issued 9-73 Revised (•) \_

Engine Displacement

V8-350 C. I. V8-454 C. I. L84 LS4

#### **Engine - Piston Rings**

, , , , , , , , , , , , , , , , , , , ,			
No. 1, oil or comp.		Compression	
No. 2. ail or comp.		Compression	
No. 3, oil or comp.		Oil	
Description - Upper	Ca	st alloy iron; barrel face	e (a)
material, coating, etc. Lower	Cast alloy	r iron; inside bevel; tape	ered face (b)
Wigh	(c)	(d)	.00700075
Gao	Upper . 010 02	0; lower . 013 025	. 010 020
Description -	Multi-pie	ece (2 rails and 1 spacer	expander)
material, coating.	Rails - steel, chr	ome plated OD; Expande	er - stainless steel
etc			. 1855 1875
W-ath	. 1850 1870		
Gap			. 010 030
	No. 1. oil or comp. No. 2. oil or comp. No. 3. oil or comp. Description - Upper material, coating, etc. Lower Width Gao Description - material, coating, etc. Width	No. 1. oil or comp.  No. 2. oil or comp.  No. 3. oil or comp.  Description - Upper Cast alloy etc. Lower  Width (c)  Gao Upper . 010 02.  Description - Multi-pie material. coating. etc Rails - steel, chrevet	No. 1. oil or comp.  No. 2. oil or comp.  No. 3. oil or comp.  Description - Upper material, coating, etc.  Lower  Width  Gao  Upper . 010 -, 020; lower . 013 -, 025  Description - material, coating, etc.  Rails - steel, chrome plated OD; Expanded of the coating of the coatin

#### **Engine - Piston Pins**

Eligine	- Liam	M Lina			
Material					
Length			2, 990-3.	010	2. 930-2. 950
Diameter			. 9270 9273 . 9895 9898		
	Locked :r	rod. in			
	piston floating etc.			Locked in rod	
Туре		In rod or piston		None	
	Bushing	Material			
	In piston		. 00015 00025	. 00045 00055	. 00030-, 00040
Clearance in rod					
Direction & amount offset in piston			Major thrust side. 060	None	Major thurst side. 0

#### **Engine - Connecting Rods**

Material Weight (oz.)		Drop forged ste	eel
		20, 80	27.84
	enter to center)	5. 695-5. 705	6. 130-6. 140
	Material & Type	Premium alum	inum
<u></u> ;		Premium alum	.847
earing	Material & Type  Overall length  Clearance (timits)		

- (a) Chrome plated on L48, molybdenum inlay on L82 & LS4, also graphite impregnated on LS4.
- (b) Wear resistant coating; Chrome plating on V8-454
- (c) Upper .0775-.0780; lower .0770-.0780
- (d) Upper . 0770-. 0780; lower . 0775-. 0780

Engine Displacement

- 1		<u></u>	
	v	8-350 C.I.	V8-454 C.I.
	L48	L82	LS4

Engine—Crankshaft

Materia	ıa'		Cast nodular iron	Forged steel	Cast nodular iron
Viciation pamper type			Rubber mounted inertia		
End thrus:	taken by be	aring (No.)		5	
Cranksnaf	t end play		. 002	-,007	. 006 010
	Material & type			Premium alumi	num
	Clearance		(a)		(b)
		No. 1	2. 4502	2x. 752	2. 7499x. 922
		No. 2	2. 4507	2x. 752	2. 7504x. 992
/iain	Journal	No. 3	2,4502x,752		2. 7504x. 992
earing	dia and bearing	No. 4		2x. 752	2. 7504x. 992
	overail length	No. 5	2, 4508	3x1. 180	2, 7505xl, 256
	, ,	No. 6		None	
		No. 7		None	
	Dir & amt. cyl. offset		<del></del>	None	
	No bolts	rmain brg. cap	10 bolts/5 caps	16 bolts/5 caps	10 bolts/5 caps
Crankpin	Crankpin journal diameter			-2.100	2, 199-2, 200

### Engine—Camshaft

Location			In block above cra	inkshaft	
Material			Cast alloy iron		
	Material		Steel backed bal	bitt	
Bearings	Number		5		
	Gear or chain		Chain		
	Crankshaft gear or sprocket material		Steel sprock	et	
Type of Drive	Camshaf sprocket	٠ ١	Nylon teeth with alun	ninum hub	
		No. of tinks	46	50	
	Timing	Width	. 625	. 750	
		Pitch	. 500	. 500	
		<del></del>	<del></del>		

- (a) No. 1 .0008-.0020
  - No. 2, 3 & 4 .0011-.0023
  - No. 5 .0017-.0033
- (b) No. 1 . 0007-. 0019
  - No. 2, 3 & 4 .0013-.0025
  - No. 5 .0019-.0035

 Car Line
 CORVETTE

 Model Year
 1974
 Issued
 9-73
 Revised (●)

		_		Engine Displacement	<u></u>	
			V8-350	CI	V8-454 C.I.	
			L48	L82	LS4	
			Lio	. 100 (	201	
		e System		Standard		
<del>'</del>	fters (Std.	OST. NA)		Standard		
aive rotato	-		Exha	net	None	
ntake, exh			1.50		1. 70:1	
Rocker ratio	· · · · · ·		1.50	:1	11.10.12	
Operating appet tlearance	ctak	e		Zero		
indicate ho ir cold)	Exna	lust		Zero		
	1	Opens (°BTC)	28° (44°)	52°	55°	
iming	intake	Cioses (°ABC)	72° (96°)	Il4°	111°	
ased on		Duration (deg.) -	280° (320°)	346°	346°	
p of imp		· Opens (°88C)	78° (88°)	98°	105°	
oints:	Exhaust	Clases ("ATC)	30° (66)	62°	63°	
		Duration (deg.)	288° (334°)	340°	348°	
	Va.⇒on	en overlap (deg.)	58° (110°)	114°	118°	
	Mater a	_ 5.55 (009.)	Allov steel	aluminized face & head		
	Overa.	ecare	4. 870-		5, 215-5, 235	
		·		2. 017-2. 023	2, 060-2, 070	
		erall head dia.	1. 935-1. 945			
		seat & face (deg.)	None None			
	Seat insert material		None . 3410 - 3417 . 3715 - 3722			
	Stem pra			0010 0027	. 3 (13 3 (46	
		cuide clearance	2000 ( 4006)	.00100027	. 4400	
itake	Littiāz		. 3900 (. 4006)	.4500	. 7700	
	Outer Valve closed		_, _,		24 04 @ 1 00	
	spring press &	(lb. @ in.)	76-84 @ 1. 70		74-86 @ 1.88	
	length	Valve open		0.05	200 212 @ 1 20	
		்ற (த்பா.)	194-206 @ 1. 25		288-312 @ 1. 38	
	:nner	Valve closed				
	spring	(.b @ in.)		Spring damper	· · · · · · · · · · · · · · · · · · ·	
	press & 'ength	Valve open				
		ub (a in.)		Spring damper	- /->	
	Materiai			oy steel, aluminized fa		
	Overan	ength	4. 913-4. 933	4. 891-4. 910	<u>5. 345-5. 365</u>	
	Actua: o	veraii head dia.	1. 495-1. 505	1. 595-1. 605	1. 715-1. 725	
	Angle of	seat & face (deg.)		46°-seat, 45°-face		
	Seat inse	ert material	None			
	Stem dia	meter	. 3410	3417	. 3713 3720	
	Stem to	guide clearance		0010-, 0027		
	Lift (% z	ero (ash)	. 410Q (. 4100)	4600	. 4400	
xhaust		Valve closed	-		0 - 5-	
	Outer spring	ம் ((பா)	76-84 @ 1. 61	76-84 @ 1. 70	74-86 @ 1.88	
	press & length	Valve open	304 304 6 3 34	104 204 @ 1 25	200 212 @ 1 20	
	ļ	5 (r (n )	194-206 @ 1.16	194-206 @ 1. 25	288-312 @ 1. 38	
	lare.	Valve closed		Spring damper		
	sorng oress &				<u> </u>	
	5-2:-	'a've open		Spring damper		
	·	' 5 ii (n.)		Shring gamper		

Note: Data bracketed () Pertains to engines used in California. (a) Head also aluminized on V8-454

Car Line	CORVETTE		<del></del> .	
Model Year	1974	Issued	9-73	_ Revised (•)

Engine	Disnle	cemen
PUBLIS		COLLEGE

V8-35	0 C. I.	V8-454 C. I.
L48	L82	LS4

### Engine — Lubrication System

	Main bearings	Pressure		
Type of lubrication (splash,	Connecting rods	Pressure		
	Piston pins	Splash		
	Camshaft bearings	Pressure		
pressure.	Tappets	Pressure		
nozzie)	Timing gear or chain	Centrifugally oiled from cams	haft bearing	
	Cylinder walls	Pressure jet cross spra		
Oil pump t	ype	Gear		
Normai oil	pressure (lb. @ engine rpm)	32-40 @ 2000 RPM	42-46 @ 2000 RPM	
Oil press	sending unit (elect. or mech.)	Electric		
Type oil int	take (floating, stationary)	Stationary		
Oil fitter sy	stem (full flow, part., other)	Full flow		
Filter repla	cement (element, complete)	Complete		
Capacity o	f c case less filter-refill (qt.)	4	5	
Oil grade recommended (SAE viscosity and temperature range)		20°F and above - 20W-20, 10W-30, 10W 0° to 60°F - 10W, 5W-30, 10W Below 20°F - 5W-20, 5W-30	-30, 10W-40	
Engine ser	vice regmt. (SD, SE, etc.)	SE		

#### Engine — Exhaust system

type (single, single	with cross-over.		
dual, other)		Dual	
Muffler No & type (	reverse flow.		
straight thru, separate resonator)		Two, reverse flow & two resonator	·s
Exhaust pipe dia.	Branch (b)	2, 00x, 072 (a) 2, 25x, 084 (a)	
(O.D., wail thick.)	Main	2, 00x, 083 (a) 2, 50x, 082 (a)	
Tail pipe dia. (O.D	& wall thickness)	2. 25x. 062	

- (a) Laminated
- (b) Pipe-resonator to muffler

 Car Line
 CORVETTE

 Model Year
 1974 issued 9-73 Revised (♠)

Engine Displacement

Pump Locations Pressure range * 7,50-9,00 PSI  Vacuum pocster (std., optional, none)  File: Type Fine mesh plastic strainer in gas tank  Chake type and paper filter element in carburetor inlet  Chake manifold heat control (exhaust or water)  Lower right front of engine  7,50-9,00 PSI  None  Fine mesh plastic strainer in gas tank  Automatic  Exhaust					v	78-35	0 C.I.		V8-454				
Carburetor Supplementary Information   Carburetor   Car				L	L48		L E	82	LS4	-			
Refill capacity (U. S. gais.)   18 approximately	Engine	e — Fuel S	ysten	<b>n</b> (Se	e supplemental page for D	Details of F	uer Injection, Superch	harger, etc. if used)					
Refill capacity (U. S. gais.)   18 approximately   Filter location   Center of rear dock   Filter location   Center of rear dock   Mechanical   Locations   Lower right front of engine   Pressure range   T. 50 - 9, 00 PSI   None   Filter mesh plastic strainer in gas tank   None   Filter mesh plastic strainer in gas tank   Automatic   Exhaust	induction t	type, Carburetor, fo	ıe <del>l</del>										
Type (gales)	in,ection 5												
Type (size.) or mech.)   Neckanical			U. S. ga	ils.)		<del> </del>							
Locations		<b>-</b>								<del></del>			
Pressure range   #   7,50-9,00 PSI	Fuel		necn.)	+		<del></del>				·-			
Vacuum booster istd. Optional inges   None	Pump												
Time	Vacus miles			· -									
Consequence				<del>'</del>	Fine	mesh			tank				
Converted Research   Carburetor   Carburetor   Carburetor   Standard   Carburetor	Filter												
Caroure   Exhaust   Exhaust		Chake type			und pur								
Air cieaner   Note   Standard   Optional		otake manifold	heat co	ntrol									
Note		expaust or water	er)				Exh	aust					
Idle speed   Spec   Automatic   Aut	Carpure-	Air cleaner	Standa	ard		0	il wetted pa	per elemen	<u> </u>				
Spec neutral profrive   Automatic   600   700   600	tor	:vpe	Option	nal	-								
			Manua	31									
Manual   Rochester   Automatic   Automat			Autom	atic	600		<u> </u>		600	)			
Manual   Rochester   Manual   Rochester   Manual   Rochester   Automatic   Manual   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Automatic   Automatic   Auto			Idle A	Fmix			Not spe	cified					
Manual   Rochester   Manual   Rochester   Manual   Rochester   Automatic   Manual   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Rochester   Automatic   Automatic   Automatic   Automatic   Auto	Carbu	retor Sunni	eme	ntary li	nformation								
Manual   Rochester   Tourism   Make   Model   and Type   Size		retor ouppi	-	1	11101111111111	1			<u> </u>				
Manual   Rochester   7044207   One;   1, 38 Pringle   Automatic   Automatic   Rochester   Tourname   Tournam		Model Usage		Engine Displ.	Transmission	<b></b>		<del>,</del>					
ALL MODELS  Manual Automatic  Manual Rochester Automatic				- 1 - 2 - 1	<del></del>	<del></del>	Make						
ALL MODELS  Automatic  ALL Manual Rochester  Automatic  Rochester  7044206 (7044506)  Automatic  Rochester  7044211 One; 1. 38 Pring 2. 25 Sec.  7044211 One; 4-bbl 2. 25 Sec.  7044210  One; 1. 38 Pring 2. 25 Sec.  7044210  Automatic  Rochester Automatic  7044221 One; 1. 38 Pring 2. 25 Sec.							1						
ALL  Manual  Models   Automatic   Rochester   7044206 (7044506)   4-bbl   2.25 Sec   2.2			250				(7044507)	One:	1. 38 Prin				
ALL Models  Manual Automatic  Manual Rochester  Automatic  Automatic  Automatic  Automatic  Automatic  Automatic  Rochester  7044211  One; 1.38 Pring 2.25 Sec  7044221  One; 4-bbl 2.25 Sec  Automatic  Automatic  7044221  One; 1.38 Pring 2.25 Sec  7044225				i		Ro	Rochester	7044204	-1	\$ - ·			
ALL MODELS  Manual Rochester  Automatic  Automatic  Rochester  Automatic  Rochester  7044211  One; 1.38 Pring 2.25 Sec.  7044221  One; 4-bhl 2.25 Sec.  7044221  One; 4-bbl 2.25 Sec.				L48		]		1		2. 23 Sec			
MODELS   Manual   Rochester   7044211   One;   1.38 Pringle   4-hhl   2.25 Sec						1		(7044506)	1				
MODELS   Manual   Rochester   7044211   One;   1.38 Pringle   4-hhl   2.25 Sec		ΔΤ.Τ.		-		<del> </del>							
MODELS L82 Automatic Rochester 7044210 4-hhl 2.25 Sec  454 Manual Rochester 7044221 One; 1.38 Pringle Automatic 7044225 4-bbl 2.25 Sec		ALL		250	Manual			7044211	One	1 38 Prim			
Automatic 7044210  454 LS4 Automatic Rochester 7044221 One; 1. 38 Pring 2. 25 Sec	MODELS					Re	ochester		-	1 -			
454   Rochester   One; 1. 38 Pring   1. 38 Pring   1. 38 Pring   2. 25 Sec				102	Automatic			7044210	7 1111	<b>2. 23 000</b>			
454   Rochester   One; 1. 38 Pring   1. 38 Pring   1. 38 Pring   2. 25 Sec						<del> </del>		<u> </u>					
LS4 Automatic Rochester 7044225 4-bbl 2.25 Sec					Manual	}		7044221		1 20 7			
Automatic /044225					R	ochester			] -				
			LS4	Automatic			7044225	4-661	2. 25 Sec				
								1	)				
			:			+		(1011200	/				
			:	•	[* 	Γ		-					
OTE: Data bracketed () pertains to engine application specific to California	1800	RPM at pr	ımn.	outlet	: :								
	1000	ICI IVI at p	F		•								
1800 RPM at pump outlet			!		!								
			į		İ	1							
					!								
			į		:								
						1							
						1		!					
				ı	<del>i</del>			<del></del>					
	MVMA-40	A-74				Page	10						

atmospheric, others

Circula

Water

pump

Cooling system capacity

Radiator

Fan

\*Drive

by letter)

belts (indicate belt used

tion thermostat

Radiator cap relief valve pressure

Starts to open at

Number of pumps

Bearing type

With neater (qt.)

Without heater (qt.)

Radiator core type (cross-flow,

Water all around cylinder (yes, no)

Upper

6√-pass

Fan cutout type

Bearing type

Water Pump

Power Steering

Air Conditioning

Fan

Drive (V-beit, other)

CORVETTE Car Line .. 9-73 Revised (•) 1/74 Model Year 1974 Issued \_

**Engine Displacement** V8-454 C. I. V8-350 C.I. L82 LS4 L48 Engine — Cooling System Type system (pressure, pressure vented, Pressure-vented thru coolant recovery system 15± 1 PSI Choke Type (choke, bypass) 192°-198° 192°-198° 177°-183° (°F) Centrifugal Type (centrifugal, other) 25.8 22.7 GPM 2000 pump rpm One V-belt Permanently lubricated double row ball External By-pass recirculation type (inter., ext.) Internal Tube and center vertical, cellular tube and fin. other) Copper-brass crossflow 17 24 -24 Opt. equipment-specify (qt.) 19 19 Yes Water jackets full length of cyl. (yes, no) Yes Number and type 1.88 1. 75 (molded, straight) Inside diameter One, molded Number and type 1.50 (molded, straight) Inside diameter One, molded Number and type One, molded (moided, straight) None Inside diameter 725-. 765 None Number of blades & spacing 5-staggered 17. 50 1. 23:1 Ratio-fan to crankshaft rev. 1. 15:1 Thermo-modulated viscous-clutch Double row ball AB AB F Generator or alternator A A FG AB ABC С C H D D I (\*) E(\*) E Air Injection \* Used with engine/manual trans-all states and engine/auto trans-California

*Drive Belt Dimensions	A	8	С	D	E	F	G	н	1	j	κ.
Angle of V					38°-4	2° —					
Nominal length (SAE)	52. 75	32. 46	43.50	59.00	32. 46	54.00	31. 86	<b>45.</b> 50	30 <b>.</b> 50		
Width	ļ		·		.080	1					

Car Line	<u>CORY</u>	ETTE		
Model Year _	1974	Issued_	9-73	Revised (•)

#### Engine Displacement

					Engine Displacement			
				V8-350 L48 mn'l trans V8-350 L82&V8 454 All States	V8-350 L48 &350 L82 V8-454 California only	V8-350 L48 auto trns All States		
Vehicle	Emissio	n Control		except California		except California		
	Type (Air injections,			Air In	jection	Engine modification		
		Туре		Semi-articula				
		Displacement		19.3 cul				
	Air	Drive ratio		1	.25:1	Controlled		
	Injection Pump	Drive type			aft pulley			
		Relief valve (ty	/pe)	Diverter		Combustion		
		Filter (describe	e)		l air cleaner			
		Air distribution		_	nifold	System		
	Air	Point of entry	<del></del>	Exhai				
	injection System	in-ection tube	i.d.	.2	<del>                                     </del>			
	,,,,,,	Check valve ty			re plate type			
		Backfire protect	<u> </u>					
		Type (controlle		Diver	ter valve	1		
		open orifice, o		Contr	olled flow			
Exhaust		Valve type		Yacuum modulated	chut off and mate	wing value		
Emission		Valve location	. =	V8-350 right rear				
Control	Exhaust	Control energy		VO-JJO TIGHT TEAT				
	Gas Recirculation			M	<u>Carburetor vacı</u> anifold exhaust c <b>r</b>			
	System	Exhaust cooler		1010	None None	0550461		
		Orifice no. and			One; .030			
		Point of exhaus			One, .030	<u>-</u> ·.		
		(spacer), carbi	•					
		manifold, other			Inlet manifol	d		
		<u> </u>	·	Thermostatically c				
		Carbure Heated A		and mixes heated a				
		neated A	711	reduce hydrocarbo	n			
	Other	Transmi	ssion	Regulates vacuum				
	Oine.	Controll	ed spark					
		(with ma		in low and interme	diate speed range:	s		
		transı	mission)					
	Type (ventilate	es to atmos.	Standard		Induction sys	item		
	induction system		Optional					
į		Make and model		AC Spark Plug - 6487778				
Ì		Location		Rocker cover - left front				
	Control	Energy source	(manifold					
Crankcase	Unit	vacuum, carbu	retor, other)		Manifold v	acuum		
Enrission Control		Control method orifice, fixed or			Variable o	rifice		
<u>.</u>		Discharges (to	intake		T-4-1			
ĺ	Comelate	manifold, other	)		Intake mani	iola		
	Complete System		) ner cap. other)		Carburetor			

Car Line	CORV	ETT	€		
Model Year_	1974	issued	9-73	Revised (•)	

Engine Displacement

V8-350 L48 mml trns. V8-350 L82&V8454	V8-350 L48 & 350 L82 V8-454	V8-350 L48 auto trns. All States
All States	California only	except California
except California		

Vehicle Emission Control (Continued)

		Thermal expansion volume (cu ft )	Approximately 10% of refill capacity
		Pressure renef location (lbs.)	1.1 PSI
	Fuel	Vacuum relief location (lbs.)	.7 PSI
	Tank	Vapor-liquid separator type	Vapor vent pipe
Evaporative Emission		Vapor vented to	Canister
	İ	(Crankcase. Cannister, other)	••
Control	Carbu-	Vapor vented to	Internally vented
	retor	(crankcase. Cannister otner)	
		Storage provision	Canister
		(crankcase, cannister, other)	••
	Vapor Storage	Volume (cu. ft.) or capacity (grams)	Approximately 50 grams storage capacity
		Control valve type	Controlled by orifices and carburetor throttle body and throttle blade position

Car Line	CORVET	TE			
Model Year	1974	Issued _	9-73	Revised (	•)

Engine Displacement					
110	250 G Y	VO 454 C T			
V8-	350 C.I.	V8-454 C. I.			
L.48	L.82	LS4			

## Electrical — Supply System

	Make an	d Model	Delco-Remy 1980216	Delco-Remy 1980205	
Battery	Voitage Rtg. & Total Plates		12 volts - 78 plates	12 bolts - 90 plates	
	SAE Des	ignation No.	3250 watts @ 0°F	4000 watts @ 0°F	
	Location		Behind drivers seat in s	storage compartment	
	Terminal	grounded	Negati	ive	
	Make		Delco-R	lemy	
Generator	Model		110095	0	
or Alternator	Type and	rating	Diode rectified with integral regulator - 42 amps.		
	Output at	t engine idle (neutral)	14-22 amps		
	Ratio—G	en to Cr/s rev.	2, 15:1		
	Make		Delco-Remy		
	Model		•••		
	Туре		Micro circuit unit; integral with generator		
		Closing voltage			
Regulator	Cutout	@ generator rpm	Non	e	
Hegulator	retay	Reverse current		•	
		to open	Non		
	Regu-	Voltage	13. 8-14. 8	@ 85°F	
	lated	Current			
	Voltage	Temperature	Operat	ing	
	test condi-	Load	3-8 amp	oeres	
	tions	Other	None		

## Electrical — Starting System

Mak	ke			Delco-	-Remy	
Starting Mod	de!			1108418	1108400	
totor Rota	ation (d	inve				
end	d view)			Cloc	kwise	
Eng	Engagement type			Positive sl	nift solenoid	
Pini	Pinion meshes (front, rear)		rear)	Rear		
	- 1	Pinion		9	9	
fotor Nun	mber eeth	Flywheel	Manual	153	168	
		- ywneer	Auto.	153	168	
Flyv	wheel to	ooth	Manual	. 4010 4130	. 4100 4220	
tace	e width		Auto.	. 4010 4130	. 4100 4220	

MVMA-40A-74 Page 14

Car Line	CORVETT	E			
Model Year _	1974	ssued9	73	Revised (•)_	

#### Engine Displacement

1			
	V8-35	C. I.	V8-454 C.I.
	L48	L82	LS4

## Electrical — Ignition System — Distributor

Breaker ga	ip (in )		. 019				
Cam angle	(deg.)		. 019 29-31				
Brkr. arm t	ension (oz.)	19	-23	28-32			
Distributor	Manuai	1112247 (1112544)	1112150	1112114			
Distributo,	Automatic	1112247	1112150	(1112114)			
Timing	Manual	8° BTC @ 900 (4° BTC @ 900)	8° BTC @ 900	10° BTC @ 800			
riming	Automatic	8° BTC @ 600	8° BTC @ 700	10° BTC @ 600			

#### NOTE: Data bracketed () pertains to engines used in California.

Distributor Model	Cr	CENTRIFUGAL ADVANCE ankshaft Degrees at Engine F	VACUUM ADVANCE Crankshaft Deg. at In. of Mercury		
	Start	Intermediate	Maximum	Start	Maximum
1112114	0° @ 850-1300		16-20 @ 4200	0° @_5-7	18. 5-21. 5@15
1112150 1112247	0° @ 1000-1400 0° @ 800-1200	9-13 @ 2400	18-22 @ 5000 16-20 @ 4200	0° @ 5-7 0° @ 5-7	13. 5-20@12 13. 5-16. 5@13.
1112544	0° @ 850-1200		20-24 @ 4200	0° @ 5-7	13. 5-16. 5@3.5
	:				
	;				
	;				
	!				
	1				
		•			

MVMA Spe	cifications	Form
Passenger	Car	

Car Line CO	RVETTE		
Model Year 197	4 issued _9-	73 . Revi	sed (•)

				Engine Displacement			
			V8-3	50 C.I.	V8-454 C.I.		
			L48	L82	LS4		
Electri	ical—lg	nition System					
		onal - Std., Opt., N.A.		Standard			
уре	Transisto	orized - Std., Opt., N. A.		Not available			
	Other (sp	pecify)		None			
	Make			Delco-Remy			
Coil	Model		1115	270	1115287		
<b>2011</b>	Amps	Engine stopped		4. 0			
	VIIIbs	Engine idling		1, 8			
	Make			AC Spark Plug			
	Model			AC R44T			
ipark Ilug	Thread (mm)		14				
wy	Tightenir	ng torque (lb. ft.)		15			
	Gap		. 033 038				
	Conducto	or type	Linen core impregnated with electrical conducting material				
able	Insulation	n type	Rub	ber with neoprene jac	ket		
	Spark pla	ug protector		Neoprene			
ocations				ic high tension ignitic	on cables		
	Type	struments and	<del></del>	cular dial with pointe	P		
peed- meter		meter (std. opt., N. A.)	Standard				
Charge inc	dicator - typ			Ammeter			
	re indicator			Electric gage			
Dil pressu	re indicator	- type	Bourdon tube gage				
uel indica	ator - type			Electric gage			
Vind-	Type - Si	landard	Electric, two-speed				
ihield viper	Type - O		None None				
Vind. Type - Standard Push - button		Push-button					
hield vasher	Type - O	· · · · · · · · · · · · · · · · · · ·	None				
	Туре	·		Vibrator			
torn	Number	used		One			
		w (each)	4.	5-6.5 @ 12.5 V (low n	iote)		
Other	_ <del></del>		Mechanical tachom	eter; Anti-theft Alarn	n; parking brake		

system warning light and buzzer.

Car Line	CORVE	TTE			
Model Year	1974	Issued	9-73	_ Revised (•) _	1/74

 Engine Displacement	
V8-350 and $V8-454$	

### Drive Units-Clutch (Manual Transmission)

Make & type		Chevrolet, single dry-disc semi-centrifugal	
Type press	sure plate springs	Circular plate diaphragm, bent finger design	
Total sorin	ig load (ib.)	2450-2750	
No. of clut	ch griven discs	One	
	Materia!	Woven type asbestos	
	Outside & inside dia.	11. 00x6, 50	
	Total eff. area (sq. in.)	123. 70	
Clutch facing	Thickness	.140	
.acmg	Engagement cushion- ing method	Flat spring steel between friction rings	
Release bearing	Type & method of lubrication	Single row ball, packed and sealed	
zawbiuō zatzioua.	Methods: springs, friction material	Coil springs	

#### **Drive Units—Transmissions**

Manuai 3-speed (std., opt . N.A.)	Not available
Manual 4-speed (std., opt., N.A.)	Standard
Automatic (std., opt., N.A.)	Optional

#### Prive Units — Manual Trans.

Number of	forward speeds	4-Speed (a)	4-Speed (b)	
	In first	2, 64:1	2. 43:1	
	in second	1. 75:1	1, 61:1	
Transmis- sion ratios	In third	1, 33:1	1, 23:1	
3101.18(03	In fourth	1,00:1	1,00:1	
	In reverse	2, 55:1	2, 35:1	
Evachronous meshing, specify gears		All for	ward gears	

Shift lever location

5-mi rever location			Floor mounted with console
Lubricant	Capacity (pt.)		3
	Type recommended		Meeting Military Specs. MIL-L-2105B
	SAE vis-	Summer	ŠAĒ 80
		Winter	SAE 80
	number	Extreme cold	SAE 80

- (a) Available all engine combinations except V8-454
- (b) Available all engine combinations except V8-350 (Std.)

Car Line	CORVE	TTE	<del>,</del>		***************************************
Model Year	1974	_ Issued _	9-73	Revised (•) _	1/74

Engine Displacement				
V8-350	-	V8-454		

### **Drive Units—Automatic Transmission**

Trade nam	e	Turbo Hydra-matic					
Type (describe)		·	3-Speed Torque Converter				
Setector (b	ecation		Lever (floor mounted)				
	Р		Park				
	9		2.08				
Sear	N		Neutral				
Ratios	D	2. 48-1. 48-1. 00					
	L2	2. 48-1. 48					
	C:	<b>2.4</b> 8					
Max_upsnift speed - drive range		83	79				
lax. kickd	lown speed - drive range	79	75				
	Number of elements		3				
Forque	Max ratio at stall	2,10					
convertor	Type or cooling (air, liquid)	Water					
	Nominal diameter	12, 20					
	Capacity - refili (pt.)	8					
Type recommended			A suffix A				
Special tra eatures	nsmission						

#### Drive Units-Axle

Type (front, rear)			Rear	
Description			Overhung pinion gear	
Limited Stij	o differentia	ii, type	Disc clutches	
Drive Pinio	n Offset		1, 50	
No of sife	rential pinic	ons	Two	
Pinion adjustment (shim, other)		m, other)	None	
Pinion bearing adj. (shim. other)		nim, other)	Shim	
Whee! bear	ring type		Taper roller	
	Capacity	(pt.)	4	
	Type recommended		Meeting Military Specs MIL-L-2105B	
Lubricant	SAE vis-	Summer	SAE 80	
	cosity	Winter	SAE 80	
		Extreme cold	SAE 80	

### Axle Ratio Tooth Combinations (See page 4 for axle ratio usage)

Axie ratio	<b>.</b>	3. 08	3. 36	3. 55	3. 70
No of restr	Projon	12	11	9	10
	Ring gear	37	37	32	37
Ring Gear C. D.			8. 3	375	

Car Line Model Year CORVETTE

1974

Issued

9-73

Revised (•) .

			Engine Displacement		
•					
Drive (	Units—F	Propeller Shaft			
Number us	ed		One		
Type (strai	ght tube, tub	e-in-tube.			
internal-ext	temai dampe	er. etc )	Straight tube		
Outer	Manua 3-	speed trans.	Not available		
dram x length x wall thick- ness	Manua: 4-	speed trans.	2, 00x29, 90x0, 120		
	Automatic fransmission		2.00x29.50x0.095		
Inter-	Fype (clain) anti-triction)		None		
mediale bearing	Luor pation (fitting, prepack)				
	Туре		Yoke		
Slip Yoke	Number of teeth		27		
	Spline O D		1. 1750		
	Make and Mfg. No.		Chevrolet 1330-32T		
	Number t	sed	Two		
	Туре (ра	l and trunnion, cross)	Cross		
Universal joints	Rear atta	on (u-bolt, clamp, etc.)	Strap & Bolt		
		Type (plain anti-friction)	Anti-friction		
	Bearing	Lubric (litting, prepack)	Pre-pack		
Drive take	en through (to	orque tube	<del></del>		
or arms, s	springs)		Torque control arms		
Torque ta	ken through	(torque tube			
or arms. s	springs)	1	Torque control arms		

<sup>\*</sup>Center to center of universal joints, or to centerline of rear attachment.

<b>MVMA</b>	<b>Specifications</b>	Form
<b>Passer</b>	nger Car	

MVMA Specifications Form			Form	Car Line CORVETTE			
Passenger Car				Model Year 1974 Issued 9-73 Revised (•)			
				Body Type And/Or Engine Displacement, Etc.			
Driv	e Units —	- Tires And W	/heels (Star	ndard)			
	Size. load range	•		GR70x15B (2+4)			
Ī	Type (bias, radi	al. etc.)		Steel belted radial			
TIRES	Maximum	Front		20			
Ξ	load inflation pressure (cold)	Rear		20			
Ĩ	Rev./mite @ 45	mph		752			
	Type & material			Short spoke spider; steel			
	Rim (size & flan	ige type)		15x8			
WHEEL.S		Type (boit or stud)		Stud			
물	Attachment	Circle diameter		4, 75			
3		Number & size		5 hex nuts 7/16-20 UNF 2-B			
[:	Spare wheel (sa	ame or other)		Same			
Driv	e Units —	- Tires And V	Vheels (Opti				
	pad range biy			Same as above but available in white stripe			
Type (t	olas, radiai etc	.)		and/or white lettering			
Wheel	type & material		_				
Rim (s	ze & flange typ	e)					
Size, Id	oad range, ply						
Type (t	bias, radial, etc	.)					
Wheel	type & material						
Rim (s	ize & flange typ	e)					
Size. lo	pad range, pty	<u>-</u>					
Type (i	bias radial etc	.)					
Wheel	type & material	)					
Rim (s	ize & flange typ	e)					
Size, to	oad range, ply						
Type (I	oras, radiat, etc	.)					
Wheel	type & material						
Rim (s	ize & flange typ	e)					
Size. k	oad range, ply						
Type (t	bias, radial, etc	.)					
Wheel	type & material						
Rım (sı	ize & flange typ	e)					
Brai	kes — Pa	rking					
Type o	f control			Grip handle control			
Location	on of control			In floor console between seats Rear wheels			
Operat	es on						
If sepa		ernal or external)		Internal			
rate fro	om Drum dia		<u> </u>	6. 50			
service brakes	;   Liming 51.	ze (length x		/ 70-1 35-0 155			
	width x th			6. 78xl. 25x0. 175			

MVMA-40A-74 Page 20

weight of vehicle.

Car Line	CORVET	[E		···
Model Year	1974	Issued	9-73	Revised (•)

			_	Body Type And/Or Engine Displacement
				·
Brake	es — :	Service	<u>.</u>	
			Front	••
Brake Typ	ne	Drum	Rear	<b>.</b> -
(stal. opt	.NA)		Front	Standard
	ļ	Disc	Rear	Standard
Self adju	stino (sto	i., opt., N.A.	1	Standard
Special Valving	Туре	(proportion ering, other)		Metering
Power Br	ake (std.	, apt., N.A.)		Standard
Booster 7	Гуре (геп	note, integra	il. etc.)	Internal
Effective	area (sq	. in.)*		74. 92
Gross lin	ing area	(sq. in.) **		86. 30
Swept ar				639. 4
			Front	Controlled by valving
Effectives	ness	Rear		Controlled by valving
<del></del>	Dina	neter	Front	* •
		ninal)	Rear	
Drum	Type	ype and		
	material			•-
			iameter	11, 75
	Outer working diameter  Inner working diameter			8. 0
Rotor	<b></b>			1, 25
	Trackness  Materiai & type (vented/solid)		(vented(solid)	Cast iron, vented
	From		(VEITLES SOILS)	1. 875
Wheel cr	y₁- ├			1. 375
	<del></del>			1, 00
Master Cylinder	Bore			1. 10 standard; 1. 14 w/power brakes
		Ke		5. 23 standard; 3. 51 w/power brakes
Pedal ar		100 15 200		576
Line pre		100 lb. ped	arioad	Self adjusting
Shoe Clearant	From			Self adjusting
	1100		N. O. )	Not available
Anti-skio		type (std., c	ppt., N.A.)	Riveted
	Bonded	or riveted		Molded asbéstos
		Material	Prim. or	5. 96x2. 21x0. 41
	i	Size	out-	5. 90x2. 21x0. 41
	Front Wheel	(length x width x	board Second	5, 96x2, 21x0, 41
	Wilee	thickness	or in-	5, 90x2, 21x0, 41
			board	~
Brake			s per snoe	One Molded asbestos
ining	Ì	Material		
		Size	Prim. or out-	5. 96x2. 21x0, 41
	Rear	(length x	board	5.0/ 2.01 0.41
	Wheel	width x thickness	Second or in-	5, 96x2, 21x0, 41
			board	
ļ	1	Segment	s per shoe	

<sup>.</sup> Excludes rivet holes, grooves, chamfers, etc.

<sup>\*\*</sup> Includes rivet holes, grooves, chamlers, etc.

<sup>\*\*\*</sup> Total swept area for four brakes. (Widest lining contact width for each brake x its contact circumference.)

Location (front or rear

Tie rods (one or two)

Drag link (trans. or longit.)

inclination at camber (deg.)

Upper

Lower

Thrust

Toe-in (outside track inches)

Diameter | Inner bearing | Outer bearing

of wheels, other)

**Bearings** 

Caster (deg.)

Thread size

Camber (deg.)

(type)

Steering spindle & joint type

Linkage

Steering

Whi Align.

Spinale

Steering

Car Line	CORVET	TE			•
Model Year _	1974	issued _	9-73	Revised (•)	

Manuai (st	a . cet NA	)		Standard-energy absorbing steering column
Power std dot NA)				Optional
steering a	adjustable steeting wheek inc		and iption	Tilt and telescopic steering wheel; 3" adjustment
(84 SA 53	otner)	(std., opt., NA)		Optional
Whee, diar	mater	Manua	at	15. 0
***************************************	10:01	Power		15. 0
	Cutside	Wall to	o wall (l. & r.)	38. 6
Turning	tront	Curb to curb (I & r.)		37. 0
diameter (teet)	Inside	Wall to wall (I. & r.)		
	rear	Curb t	to curb (I. & r.)	
	Gear	Type Make		Semi-reversible, recirculating ball nut
				Saginaw Steering
Manua		Ratios	Gear	16.1:1
		1181103	Overati	20.2:1 standard; 17.6:1 fast steering
	No wheel turns (stop to stop)		stop to stop)	3.4 standard; 2.92 fast steering
	Type (coaxia), linkage, etc.)			Linkage, power pump assisted
	Make			Saginaw Steering
		Туре		Same as manual
Power	Gear	Ratios	Gear	16. 1:1
	L	nauos	Overail	17.6:1
	Pump dri	ven by		Crankshaft pulley
	No. whee	i turns (	stop to stop)	2. 92
	Туре			Parallelogram

Rear

None

Two

7.68@5°

None
Manual P±1/2 Power P2-1/4±1/2

P3/4±1/2

1/8±1/32
Steering knuckle with spherical joint

1.37455±.00025

0.84305±.00025 27/32-20 NEF - 3 (modified)

Ball stud with non-metallic bearing surface

Ball stud with non-metallic bearing surface

(a) Rear wheel alignment; Camber N1/2±1/4
Toe-in 3/32 ± 1/32

Car Line	CORVET	TE		·
Model Year	1974	issued	9-73	Revised (•)

Body Type And/Or Engine Displacement
·

#### Suspension — General

(See Supplement page for details on Air Suspension)

Provision f	or car leveling	Front stabilizer shaft				
Provision for brake dip control Provision for acc. squat control Special provisions for car jacking		Mounting angle at front upper control arm  None  Front: 5" forward of front door opening, under frame Rear: 3" forward of wheel opening, under frame				
				Shock	Туре	Direct double acting hydraulic
				absorber front &	Make	Delco
rear	Piston dia.	1,00				

#### Suspension — Front

Type and description		Independent SLA with coil springs
Travel	Full Jounce	4, 36
iravei	Full Rebound	-3, 65
	Type (coil, leaf, other)	Coil
	Material	Steel alloy
Spring	Size (corl design height & I.D., bar length x dia.)	10.27 x 3.80; 130.84 x .606
	Spring rate (lb. per in.)	260 (Ъ)
	Rate at wheel (lb. per in.)	97. 5 (b)
Stabilizer .	Type (link, linkless, frameless)	Link
	Material & bar diameter	0, 8125 for V8-350; 0, 875 for V8-454

#### Suspension — Rear

			<del>,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,</del>	<del></del>
Type and o	descript	ion .	(a	)
Drive and t	torque t	aken through	Torque cor	trol arms
	Full .	lounce	3.4	
Travel	Full Rebound		3.	28
<del></del>	Type (coil, leaf, ether)			l-leaf
	Material		Chrome ca	
	Size (length x width, coit design			
	heigh	nt & f.D., bar length & dia.)	48, 60 >	2, 25
Spring	Sprin	g rate (lb. per in.)	170	
	Rate at wheel (lb. per in.)		134. 4	(b)
	Mounting insulation type		Rubber mounted at differential,	vertical loading only at shackle
	If	No. of leaves	Nir	
	leaf	Shackle (comp. or tens.)	Ten	sion
O	Type (fink, linkless, frameless)		Lir	ık (c)
Stabilizer	Mate	rial & bar diameter	HR steel	
Track bar t	уре	<u> </u>		

- (a) Full independent with fixed differential; transverse multi-leaf spring, lateral struts and universally jointed axle shafts
- (b) For base equipped model, springs are computer selected by size and rate according to vehicle weight including optional equipment
- (c) With V8-454 optional engine

<b>MVMA</b>	<b>Specifications</b>	Form
Passer	nger Car	

Car Line	CORVE	TTE	<u></u>	-
Model Year	1974	issued9-73	Revised (•)	_

		- Body	Туре						
		Sport	Conve	rtible					
		Coupe	Soft Top	Hard Top					
Frame									
Type and description (Sep unitized frame, partially - u		All welded, full length, la with (5) crossme		d frame					
Body — Miscell	aneous i	nformation							
Drs. hingea Front doors		Fr	ont						
(front, rr.) Rear doors		-	-						
Type of finish (lacquer, ena	amel, other)	Lac	guer						
Hood counterbalanced (ye	s. no)		<u> </u>						
Hood release control (inter	nal, external)	Inte	<u>rnal</u>						
Vehicle Indent. No. location	n	Left-hand windshield pillar							
Engine No. location		Front right side of cylinder block							
Theft protection - type		Lock mounted on steering column locks steering wheel transmission shift lever and ignition anti-theft							
Vent window control metho	od Front	None							
(crank, friction pivot)	Rear								
Clark, medicir preciy	Front	Bucket, polyure	hane padding						
Seat cushion type	Rear			<u> </u>					
	3rd seat								
	Front	Bucket, polyure	Bucket, polyurethane padding						
Seat back type	Rear		<u> </u>	<del></del>					
	3rd seat		<del></del>						
Windshield glass type (i.e. single curved - laminated (		Curved-laminated	plate-tinted	****					
Side glass type (i.e., curve tempered plate)	ed -	Curved-tempered	plate-tinted_						
Backlight glass type (i.e., compound curved - tempered plate, three piece)		Flat, tempered plate, tinted	Vinyl plastic	Curved, temper plate					
Windshield glass exposed	surface area	97	77. 4						
Side glass exposed surfac			0.8						
Backlight glass exposed s	·	392.5	418.0	620.1					
Total glass exposed surface area		2170. 7	2196.2	2398.3					

Car Line	CORVE	TŢĘ			
Model Year	1974	issued_	9-73	Revised	d (e)

Bod	у Туре
Sport Coupe	Convertible

Conveni	ence Eq	uipment
---------	---------	---------

	Side windows		Option	nal				
Power windows	Vent windows		N.A					
	Backlight or tailgate		NA					
Power sea	its (specify type as							
weil as av	railability)		NA					
Reclining	front seat back (R-L or both)		NA					
Radios (st	pecify type as							
weil as av	ailability)	Optional-AM-FM	Push-button,	AM-FM,	FM Stereophonic			
Rear seat	t speaker		NA					
Power ant	enna		∡ NA					
Clock			Standa	ard				
Air conditi	ioner (specify type	0.4:1.7			1 \			
and availa	ability)	Optional-Fou	r-Season (mai		roi )			
Speed wa	rning device		NA NA					
Speed co	ntrol device	NA NA						
ignition lo	ck (amp		NA NA					
Dome lam	q	Standard			NA			
Glove con	npartment lamp		Standa	ard				
Luggage	compartment lamp		Standa	ırd				
Underhoo	d lamp		N.A					
Courtesy	ато		Standa	ard				
Map lamp	with inside rear	view mirror	Option	nal				
	light lamp		N.A	<u> </u>				
Rear wind	now petroster							
electricall	y heated		NA					
Rear wind	low defogger		Option	nal				
	•							
			•					
	i							

## Lamp Height And Spacing\*

	Headlamp	Highest**	25, 86	
	(H125)	Lowest	25. 77	
Height above pround to	Tail	Highest	25.10	
center of bulb or marker Sidemarker Sidemarker Rear	Lowest	25. 10		
	Front	17. 53		
	Rear	18. 65		
	Inside	11, 30		
	Head amp	Outside**	18, 00	
istance from		Inside	14. 34	
C/L of car to Tail center of bulb	i aıl	Outside	21. 74	
		Front	22, 52	
Dir	Directional	Rear	21. 74	

<sup>\*</sup>Measured with passenger load and trunk cargo load specified in Car and Body Dimension section

<sup>\*\*</sup>If single neadlamps are used enter here.

Car Line	COR	VETTE_			
Model Year	1974	Issued	9-73	Revised (•)	

	Vehicle Weights									
	CURB	WEIGHT * (F	ounds)	%	PASS. WEIGH	SHIPPING WEIGHT **				
Model	Front	Rear	Totai		In Front		in Rear	(Pounds)		
				Front	Rear	Front	Rear			
2-Door Sport Coupe lyZ37	1671	1719	3390					3309_		
l i		•								
Z-Door Convertible IYZ67	1664	1732	3396	1		_		3315		
			<u> </u>	: <del> </del>	<u> </u>	<del> </del>				
		<u> </u>	! !	1		<del> </del>	•			
					<u> </u>		_			
						<del>                                       </del>				
			<u> </u>	-	<u> </u>					
		<del></del>	<u> </u>	<u> </u>						
							<u> </u>	<u> </u>		
			ļ							
			<u></u>	 <del> </del>						
			<u> </u>	<u> </u>						
						-	 			
					<u> </u>	ļ	·	-		
				<u>.                                    </u>	<del></del>		<u> </u>			
	i					-		1		
	-									
								!		
						<u> </u>		<u> </u>		
							-	<del></del>		
		<u></u>		<u> </u>	<u> </u>	<u> </u>		+		
		<del> </del>	-		ļ <del></del>		<del></del>			
						-		<del> </del>		
	<del></del>		<del></del>							
						<u> </u>				
								ļ. ————		
						<u> </u>		<del> </del>		
			<u> </u>		_					
		-				<del> </del>		<del> </del>		
								<del> </del>		
						<del> </del>	<u> </u>			
								<del> </del>		
			L		<u>i                                     </u>	L				

MVMA-40A-74

Reference - SAE Aerospace-Automotive drawing standards. Section E 102 (d).

- Shipping weight definition - weight of basic vehicle with regular equipment, including grease, oil and (4) gallons of gasoline and engine coolant to capacity.

CORVETTE

Model Year 1974 Issued 9-73 Revised (•)

	Optional Equipment Weights								
	WEIGHT (Pounds)								
Equipment Differential Weights	Fı	ront		Rear		Totai	Remarks		
Air Conditioning	+	65		16			With V8-350, RPO L48& L82 Engines		
	+	70	+	17	+		With V8-454, RPO LS4 Engine		
Power windows	+		+	3	+	7	! :		
Power brakes	+		+		+	10			
Power steering	+	25			+		With base engine and RPO L82		
	+	27			+		With LS4 engine		
Auxiliary Top Gymkhana Susp. Frt. & Rr.	+	10	+	59	+	69			
Gymana basp. 11t. & m.	$\vdash$		-						
Radio AM/FM Stereo.	+	_11			<u> +</u>	_18			
Radio AM/FM Push Button	+	-7	+	7	+	14	4		
					_				
					-				
			-		├				
350 cu. in. V8-L82	+	11	+	3	+	14			
454 cu. in. V8-LS4	+	178	+	22	+	200			
			-						
Turbo Hydra-Matic Trans	+	37	+	17	+	54	With L48 & L82 Engines		
	+	31	+	14	+		With LS4 Engine		
	ļ <u>.</u>		-						
			-		-				
			_						
			-		_				
			<u> </u>						
			_						
			-		-				
							1014.		
				<del></del>					
-			-		-	-			
			ļ						
			l		Ì				

<b>MVMA</b>	Spe	cifications	Form
<b>Passer</b>	nger	Car	

CORVETTE Car Line 1974 9-73 Revised (•) Model Year Issued \_

Body Type	 	

#### Vehicle Fiducial Marks

Fiduciai Mark	
Number *	

Front

Rear

Fiducial

#### Define Coordinate Location

- X Fiducial Mark to Centerline of Car Front, Width measurement made from centerline of car to fiducial mark located on top of the front seat adjuster mounting bolt.
- Y Fiducial Mark to Vertical Body Zero Line Front, Measured horizontally from the body zero line to the front fiducial mark located on top of the front seat adjuster mounting bolt.
- Z Fiducial Mark to Horizontal Body Zero Line Front, Measured vertically from body zero line to the front fiducial mark located on top of the front seat adjuster mounting bolt.
- X Fiducial Mark to Centerline of Car Rear. Width measurement made from centerline of car to fiducial mark located on the rear underbody crossbar.
- Y Fiducial Mark to Vertical Body Zero Line Rear, Measured horizontally from body zero line to the rear fiducial mark located on rear underbody crossbar.
- Z Fiducial Mark to Horizontal Body Zero Line Rear, Measured vertically from body zero line to the rear fiducial mark located on the rear underbody crossbar. Fiducial Mark


Mark Number		Coordinate Loc Fiducial M		at Design	
Front	X 27. 02	Y 30.91	†Z 2. 23	Coupe & Convertible	9. 59
Rear	x	Y	Z	Coupe & Convertible	19. 51


Rear 88.18 12, 62 24.14

MVMA-40A-74


Reference — SAE Recommended Practice, J182


## Exterior Car And Body Dimensions — Key Sheet

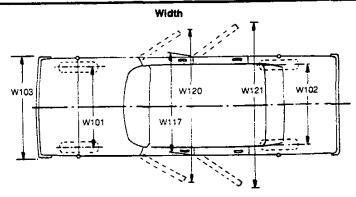


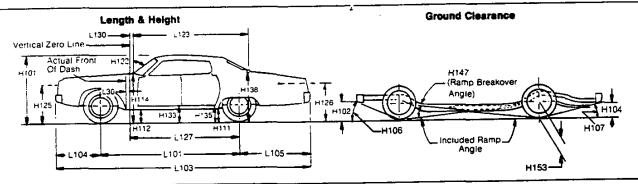

## Interior Car And Body Dimensions — Key Sheet

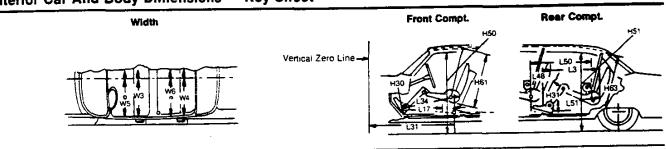

 

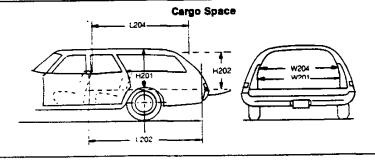

## Exterior Car And Body Dimensions — Key Sheet Dimension Definitions

#### Width Dimensions

- W101 WHEEL TREAD FRONT. Measured at centerline of tires, with nominal camber, at ground.
- W102 WHEEL TREAD REAR. Measured at centerline of tires at ground.
- W103 MAXIMUM OVERALL CAR WIDTH, Include bumpers, moldings, or sheet metal protrusions. Measured to outside of metal
- W117 MAXIMUM BODY WIDTH AT NO. 2 PILLAR. Measured across body at No. 2 pillar, excluding hardware and applied roldings.
- W120 MAXIMUM OVERALL CAR WIDTH, FRONT DOORS OPEN is measured to outside of sheet metal with front doors in maximum hold-open position.
- W121 MAXIMUM OVERALL CAR WIDTH, REAR DOORS OPEN is measured in same manner as W120.

#### **Length Dimensions**

- L30 VERTICAL ZERO LINE TO ACTUAL FRONT OF DASH. If actual Front of Dash is to the rear of Body Zero Line, it is identified by a minus (—) sign.
- 1 101 WHEEL BASE
- L103 OVERALL LENGTH. Include bumper guards if standard equipment.
- L104 OVERHANG FRONT. Measured from C/L of front wheels to front of car, including bumper guards if standard equipment.
- L105 OVERHANG REAR. Measured from C/L of rear wheels to rear of car, including bumper guards if standard equipment
- L123 . BODY UPPER STRUCTURE LENGTH AT CAR CENTERLINE. The horizontal dimension from the Cowl Point to the Deck Point.
- L127 VERTICAL ZERO LINE TO CENTERLINE OF REAR WHEELS. A honzontal dimension.
- L130 VERTICAL ZERO LINE TO WINDSHIELD COWL POINT. The horizontal dimension from the vertical zero line to the theoretical intersection of extended windshield glass plane and normal cowl surface.

#### **Height Dimensions**

- H101 OVERALL HEIGHT DESIGN. Measured with the vehicle in Manufacturer's Design Weight attitude.
- H114 COWL POINT TO GROUND. Measured at vehicle centerline.
- H138 DECK POINT TO GROUND. Measured at vehicle centerline.

- H112 ROCKER PANEL TO GROUND FRONT. The vertical dimension from ground to bottom of rocker panel. excluding flanges. Measured to the outside of sheet metal at foremost point of rocker panel.
- H133 BOTTOM OF DOOR TO GROUND, CLOSED FRONT is the same point on the door as H132 dimension, with door closed.
- H111 ROCKER PANEL TO GROUND REAR. The vertical dimension from ground to bottom of rocker panel, excluding flanges. Measured to the outside of sheet metal at front of rear wheel opening.
- H135 BOTTOM OF DOOR TO GROUND, CLOSED -- REAR is measured in same manner as H133.
- H122 WINDSHIELD SLOPE ANGLE. The angle between a vertical line and the windshield surface at car centerline.

  On compound-curved windshields the chord of the arc is used and limited to that section of the windshield comprehended by an 18-inch chord.
- H125 HEADLAMP CENTERLINE TO GROUND is measured vertically to the center of the upper lamp.
- H126 TAILLAMP CENTERLINE is measured vertically from ground to the centerline of the upper bulb.

#### **Ground Clearance Dimensions**

- H102 BUMPER TO GROUND FRONT. Minimum dimension, includes bumper guards.
- H104 BUMPER TO GROUND REAR. Minimum dimension. includes bumper guards.
- H106 ANGLE OF APPROACH. The angle between ground and a line tangent to the front tire static loaded radius arc and the first point of interference, i.e., bumper, guard, gravel deflector, fender or other component, excluding license plate. This dimension may be determined graphically for reporting purposes.
- ANGLE OF DEPARTURE. The angle between ground and a line tangent to the rear tire static loaded radius arc and the first point of interference, i.e., bumper, guard, gravel deflector, tail pipe, fender or other component, excluding license plate. This dimension may be determined graphically for reporting purposes.
- H147 RAMP BREAKOVER ANGLE. The supplement of included ramp angle (180° minus included ramp angle) over which car can pass without interference; measured with car sitting on a level surface, using lines tangent to arcs of front and rear static loaded radii and intersecting at point on underside of car which defines the smallest angle.
- H153 REAR AXLE DIFFERENTIAL SYSTEM TO GROUND is a minimum clearance.
- H156 MINIMUM RUNNING GROUND CLEARANCE. Location of measurement on the car is to be clearly recorded.

MVMA-40A-74 Page 30

# Interior Car And Body Dimensions — Key Sheet Dimension Definitions

#### Front Compartment Dimensions

- L31 H POINT TO VERTICAL ZERO LINE FRONT is a norizontal dimension.
- H61 EFFECTIVE HEAD ROOM FRONT. The dimension from H Point to the headlining, plus a constant of 4.0 inches, measured along a line 8° to rear of vertical.
- L34 MAXIMUM EFFECTIVE LEG ROOM ACCELERATOR. Measured along a diagonal line from the Manikin ankle pivot center to the H Point plus a constant of 10.0 inches. For treadle type accelerator pedals, the leg room is measured with the Manikin's right foot on the accelerator pedal and the Manikin Heel Point at Accelerator Heel Point. All other types of accelerator pedals will be measured with the Manikin foot angle set at 87° and the shoe touching the pedal.
- H30 H POINT TO HEEL POINT FRONT. The vertical dimension from the H Point to the Accelerator Heel Point.
- L17 H POINT TRAVEL. The horizontal dimension between the H Point in the most forward and rearward seat positions.
- W3 SHOULDER ROOM FRONT. The minimum lateral dimensions between the door garnish moldings or nearest interference, measured at the H Point station.
- W5 HIP ROOM FRONT. The lateral dimension through the H Point to trimmed body surfaces. Depress loose side wall cloth to trim foundation or other obstruction if such construction exists.
- H50 UPPER BODY OPENING TO GROUND FRONT. The vertical dimension from a point on the trimmed body opening to the ground, measured at the H Point station.

#### **Rear Compartment Dimensions**

- L50 H POINT COUPLE DISTANCE. The horizontal dimension from the front seat H Point to the rear seat H Point.
- H63 EFFECTIVE HEAD ROOM REAR. The dimension from the H Point to the headlining, plus a constant of 4.0 inches, measured along a line 8° to rear of vertical.
- L51 MINIMUM EFFECTIVE LEG ROOM REAR. Measured along a diagonal line from the ankle pivot center to the H Point plus a constant of 10.0 inches, with the foot positioned to the nearest interference between the seat structure and toe, instep or lower leg.
- H31 H POINT TO HEEL POINT REAR. The vertical dimension from the H Point to the Manikin Heel Point on the depressed floor covering.
- L48 MINIMUM KNEE ROOM REAR. The minimum dimension from the Manikin knee pivot center to the back of the front seat back.
- L3 REAR COMPARTMENT ROOM. The horizontal dimension from the back of front seat to front of rear seat back at height tangent to the top of rear seat cushion.
- W4 SHOULDER ROOM REAR. The minimum lateral dimension between the door gamish molding or nearest interference. Measured at H Point station.

- W6 HIP ROOM REAR. The lateral dimension through H Point to trimmed body surfaces. Depress loose side wall cloth to trim foundation or other obstruction when such construction exists.
- H51 UPPER BODY OPENING TO GROUND—REAR. The vertical dimension from a point on the trimmed body opening to the ground, measured 13.0 inches forward of the H Point.

#### **Luggage Compartment Dimensions**

- V1 LUGGAGE CAPACITY USABLE. The total luggage compartment luggage capacity in cubic feet with the tire and tools in place.
- H195 LIFTOVER HEIGHT. Vertical dimension from the highest point on the luggage compartment lower opening to ground, excluding comer radii.

#### Station Wagon — Third Seat Dimensions

- W85 SHOULDER ROOM THIRD SEAT. The minimum lateral dimension between the door gamish moldings or nearest interference. Measured at H Point station.
- W86 HIP ROOM THIRD SEAT. The lateral dimension through H Point to trimmed surfaces.
- L86 EFFECTIVE LEG ROOM THIRD SEAT. Measured along a diagonal line from ankle pivot center to H Point plus a constant of 10.0 inches. With rear-facing third seat, foot is positioned in foot well or to nearest interference with rear end or rear closure.
- H86 EFFECTIVE HEAD ROOM THIRD SEAT. The dimension from H Point to the headlining, plus a constant of 4.0 inches. Measured along a line 8° to rear of vertical.

#### Station Wagon — Cargo Space Dimensions

- L202 CARGO LENGTH AT FLOOR FRONT SEAT. The horizontal dimension, measured at the floor level from the rear of the front seat back to the normal inside limiting interference on the tailgate, on the car centerline.
- L204 CARGO LENGTH AT BELT FRONT SEAT. The horizontal dimension measured from the top rear of front seat back to a vertical extension line from the normal inside limiting interference at the top of the tailgate, on the car centerline.
- W201 CARGO WIDTH WHEELHOUSE. The minimum horizontal dimension, measured between wheelhousings at floor level.
- W204 OPENING WIDTH AT BELT. The minimum horizontal dimension, measured between the nearest normal inside limiting interferences of the rear opening at the top of the tailgate.
- H201 MAXIMUM CARGO HEIGHT. The maximum vertical dimension, measured from the top of the floor covering to the headlining, on the car centerline.
- H202 REAR OPENING HEIGHT. The vertical dimension measured from the top of the floor covering to the normal inside limiting interference at the top of the rear opening, on the car centerline, with both tail and liftgates fully open.
- V2 CARGO VOLUME INDEX BEHIND FRONT SEAT. The total volume in cubic feet above the normal load floor and behind the front seat with the liftgate and tailgate closed.

W4xL204xH201 1728

## Index

Subject	Page N	0.	Subject	Pege No.
Alternator	1	14	Kingpin (Steering Axis)	<b>22</b>
Automatic Transmission		8		25
Axis, Steering		22	Lamp height and spacing	,
Axie, Rear	4, 1	8	Legroom	
Battery		ı.a	Littern volum	
Bearings, Engine			Licinas — Clutch Brake	17, 21
Belts — Fan, Generator, Water Pump			1nootion	. 9. 17. 18. 19
Brakes — Parking, Service			Luggage Compartment	
-			<del></del>	
Cable — Ignition			Models	1
Camshaft			Motor, Starting	
Capacities		-	Muffler	
Cooling System		11	Passenger Capacity	1
Fuel Tank			Pageager Weight Distribution	26
Lubricants			Pieton Pine & Rings	5, 6
Engine Crankcase	47	9	Pietone	
Transmission			Power Brakes	21
Car Models			Power Steering	
Car and Body Dimensions			Power Teams Propeller Shaft, Universal Joints	
Width		2	Pumps — Oil, Fuel	9. 10
Length		2	Water	1
Height		2		
Ground Clearance		2	Radiator — Cap, Hoses	
Front Compartment			Potion — Avia	4. 10
Luggage Compartment		3	Compression	ه
Station Wagon — Third Seat		3	Steering Transmission	
Station Wagon — Cargo Space		3	Rear Axle	4. 1/
Carburetor	4, 10,	13	Regulator — Generator	14
Caster	<i></i>	22	Dime	23
Choke, Automatic			Gines Dieton	
Clutch — Pedal Operated			Rods — Connecting	· · · · · · · · · · · · · · · · · · ·
Connecting Rods			_	2
Convenience Equipment		25	Seats Shock Absorbers, Front & Rear	
Coaling System		11	Charle Plane	
Crankshaft		7	Speedometer	<i></i>
Cylinders and Cylinder Head	<i></i>	5	Comings - Errort & Page Systementaling	4
Dimension Definitions			Chabilinas (Curay Boo) — Front & Book	<b>Z</b> i
Key Sheet — Exterior	29,	30	Starting System	
Key Sheet Interior	29,	31	Steering Suppression — Ignition, Radio	11
Distributor — Ignition		15	Suspension — Front & Rear	
Electrical System	14, 15,	16		
Emission Controls	ر 12,	13	Tail Pipe	<u>.</u> !
Engine			That Protection	. <i></i>
Bore, Stroke, Type		5	Thermostat Cooling	1
Compression Ratio	4,	, 3 10	Timing — Valve, Ignition	۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰۰
Displacement	4, 3,	5	Tires	2
General Information, H.P. & Torque		. 5	Torque Converter	1
Identification Number Location		24	Tarana Casina	'
Lubrication		9	Tennemiering — Tunge	40, 10, 17, 1
Power Teams		4	Transmission — Automotic	4, 10, 17, 1
Exhaust System		9 25	Transmission — Manual	4. 10. 1
Equipment Availability			Transmission — Ratios	161 1
Fan. Cooling		11	Tarak Lumasan Connecits	
Fiducial Marks		28	Turning Diameter	2
Filters — Engine Oil, Fuel System	9,	10		
Frame			Unitized Construction	
Front Suspension			Universal Joints, Propeller Shaft	1
Fuel Injection		10	Vaives — Intake & Exhaust	
			Vaives — Intake & Exhaust	
Generator and Regulator		14	Voltage Regulator	
Glass		24		
Height (Lamps)		25	Water Pump	<u> 1</u>
Headroom — Body		3	Weighte	26, 2
Heights — Car and Body		2	Wheel Alignment	
Horns		16	Wheelbase Wheels & Tires	
Horsepower — Brake		4	Wheat Caindle	<del>.</del>
Ignition System		15	Width Cor and Body	
Inflation — Tires		20	186 materials and ad	<b></b>
Instruments		16	Windshield Wiper and Washer	1

## **Corvette Power Teams**

		Positraction rear axle ratios					
	Engine RPO		4-Spe	ed Manual	Turbo Hydra-matic		
			Std.	RPO M21	RPO M40		
Turbo-Fire 350-4	Std.	Standard	3.36	_	3.08		
14150-111e 000-4	Sia.	Performance (RPO G92)			3.36		
		Economy (RPO G95)	3.08				
Turbo-Fire Special 350-4	1 L82▲	Standard	3.55	3.70*	3.55		
rando-ine opecial 550-4	LOZ A	Performance (RPO G92)	3.70†	<del>,</del> —	3.70†		
		Economy (RPO G95)	_	3.55			
		Standard	3.08	3.36	3.08		
Turbo-Jet 454-4	LS4 <sup>■</sup>	Performance (RPO G92)	3.36	3.55	3.36		
		Economy (RPO G95)	_	3.08	<del>-</del>		

<sup>\*3.55</sup> ratio furnished when air conditioning is ordered. †NA with air conditioning.

\*Special ratios available with Off-Road suspension (RPO Z07): 4.11, 3.70, 3.55 or 3.36.

\*Special ratios available with Off-Road suspension (RPO Z07): 3.55, 3.36 or 3.08.

## **Engine Specifications**

Engine	Turbo-Fire 350-4	Turbo-Fire Special 350-4	Turbo-Jet 454-4
Type	V8	V8	V8
Displacement (cu. in.)	350	350	454
Bore x Stroke (in.)	4.00 x 3.48	4.00 x 3.48	4.25 x 4.00
HP @ RPM	195 @ 4400	250 @ 5200	270 @ 4400
Torque @ RPM	275 @ 2800	285 @ 4000	380 @ 2800
Compression ratio	8.5:1	9.0:1	8.25:1
Carburetion	4-barrel	4-barrel	4-barrel
Exhaust system	dual	dual	dual

Note: Horsepower and Torque ratings are SAE net as installed.

Tuesconsingless	Transmission gear ratios (:1) Shift								
Transmissions	Engines	1	2	3	4	R	Console		
4-Speed Fully Synchronized (Standard)	All	2.52	1.88	1.46	1.00	2.59	×		
4-Speed Fully Synchronized (RPO M21)	L82 and LS4	2.20	1.64	1.27	1.00	2.26	×		
Turbo Hydra-matic (RPO M40)	All	D	Low Low	:.)—5.21:1 2—5.21:1 1—5.21:1 se—4.37:1	to 1.48:1 to 2.48:1		×		

Clutch Details	All Engines
Clutch type	Semi-centrifugal bent-finger-design diaphragm spring with single dry disc—pearlitic or nodular iron pressure plate
Disc Facing Material	Premium grade woven asbestos
Disc Facing Outside Diameter (in.)	11.00
Disc Facing Total Area (sq. in.)	123.70
Spring Effective Plate Load (lbs.)	2450-2750

# **Corvette Selected Options**

Description	RPO Number	Coupe	Convertible
Air conditioning—Four-Season.	C60	×	×
Battery, heavy-duty. Included when Turbo-Jet 454-4 engine is ordered	UAl	×	×
Belts, Custom Deluxe shoulder. Driver and passenger	A85	Std.	×
Brakes, power. Included with RPO ZO7	J50	×	×
California emission equipment	YF5	×	×
Defogger, rear window (forced-air)	C50	×	×
Horns, dual	U05	×	×
Map light. Mounted on inside rearview mirror	UF1	×	×
Off-road package. Available with optional engines and M21 4-speed transmission only. Includes Gymkhana suspension and power brakes	ZO7_	×	×
Radio equipment. Includes 30" fixed height rear antenna AM/FM Radio	U69	×	×
AM/FM/Stereo Radio	U58	×	×
Roof cover, vinyl. Black—with auxiliary hardtop only	C08	NA	×
Steering, power-variable-ratio	N41	×	×
Steering wheel, tilt-telescopic	N37	×	×
Suspension; Gymkhana. Included with off-road package	FE7	×	×
Top, auxiliary, Hardtop—in addition to folding top	C07	NA	×
Top, folding: manually operated; available with all exterior colors Black	ВВ	NA	×
White	AA	NA	×
Trim, Custom interior. Includes leather-vinyl seat trim, special cut-pile carpeting, door trim panels with simulated wood-grained accents and lower carpeting plus console with simulated wood-grained accents	•••	×	×
Windows, power	A31	×	X
Tires			
GR70-15B steel belted radial ply white stripe	QRM	×	×
GR70-15B steel belted radial ply white lettered	QRZ	×	×

## **Corvette Interior Trim Chart**

PLEASE NOTE: The exterior and interior combinations for solid color paint shown in the chart below have been established as the combinations that would be attractive to the average customer. Orders for non-recommended solid color exterior and interior trim combinations on the Coupe model may be submitted, provided the dealer initials the appropriate order form block as verification that the requested

combination is definitely desired.

This procedure does not apply to the Convertible model as combinations shown are the <u>only</u> combinations that have been approved.

			INTERIOR TRIM								
			Black		Blue (Dark)	Neutral (Light)		Saddle (Medium)		Silver	
			Vinyl	Custom Interior	Vinyl	Vinyl	Vinyl	Vinyl	Custom Interior	Vinyl	Custom Interior
COUPE OR CONVERTIBLE	Bucke	t seat	VBB2	XBB2	VDD2	VNN2	VHH2	VSS2	XSS2	VYY2	XYY2
Exterior Body Color Code:	Lower	Upper			ı		:	1			
Blue, Corvette Med. (Metallic)	22	22	>	<	×						×
Brown, Dark (Metallic)	68	68	>	<		×	•		×		×
Gray, Corvette (Metallic)	17	17	>	<	×	×	×		×	:	×
Green, Dark (Metallic)	48	48	>	<	:	×		<del></del>	×		×
Orange, Corvette (Metallic)	80	80	>	<	1	×			×		×
Red, Mille Miglia	76	76	>	<	;	×	×		×	:	×
Red, Medium (Metallic)	74	74	>	<		×	×		×	:	×
Silver Mist, Corvette (Metallic)	14	14	>	<	×		×		×	:	×
White, Classic	10	10	>	<	×	×	×	,	×	:	×
Yellow, Bright Corvette	56	56	· >	<		×		į.	×	:	×

## Vinyl Roof Cover\_RPO CO8 (with auxiliary hardtop only)

Vinyl roof color	Code	Exterior color availability
Black	BB	All Exterior Colors

CONVERTIBLE TOP COLORS: Choice of white (AA) or black (BB) top available with all exterior colors.

# **Corvette Specifications**

Exterior Dimensions	Coupe	Convertible	
Wheelbase	98.0	98.0	
Length (overall)	185.5	185.5	
Width (overall)	69.0	69.0	
Height (loaded)	47.7	47.8	
Front tread	58.7	58.7	
Rear tread	59.5	59.5	
Minimum ground clearance	4.2	4.2	
Interior Roominess			
Head room	36.2	37.1*	
Leg room	42.1	42.1	
Hip room	48.8	48.8	
Shoulder room	47.9	47.9	
Luggage Compartment			
Usable luggage space (cu. ft.)	6.5	6.5	
Glass Area			
Windshield glass area (sq. in.)	977.4	977.4	
Rear window glass area (sq. in.)	392.5	418.0	
Total glass area (sq. in.)	2170.7	2196.2	
Steering & Tires			
Turning circle—curb-to-curb (ft.)	3	37.0	
Turning circle—wall-to-wall (ft.)		8.6	
Steering ratio—std. (overall)	20	0.2:1	
Steering ratio—power (overall)		7.6:1	
Standard tire size	GR70-15B		
Fuel Capacity & Weight			
Rated fuel tank capacity (gallons)	18	18	
Curb weight (lbs.)	3388	3396	
Curd weight (ibs.)	0000	3315	

<sup>\*</sup>With removable hardtop-36.0